


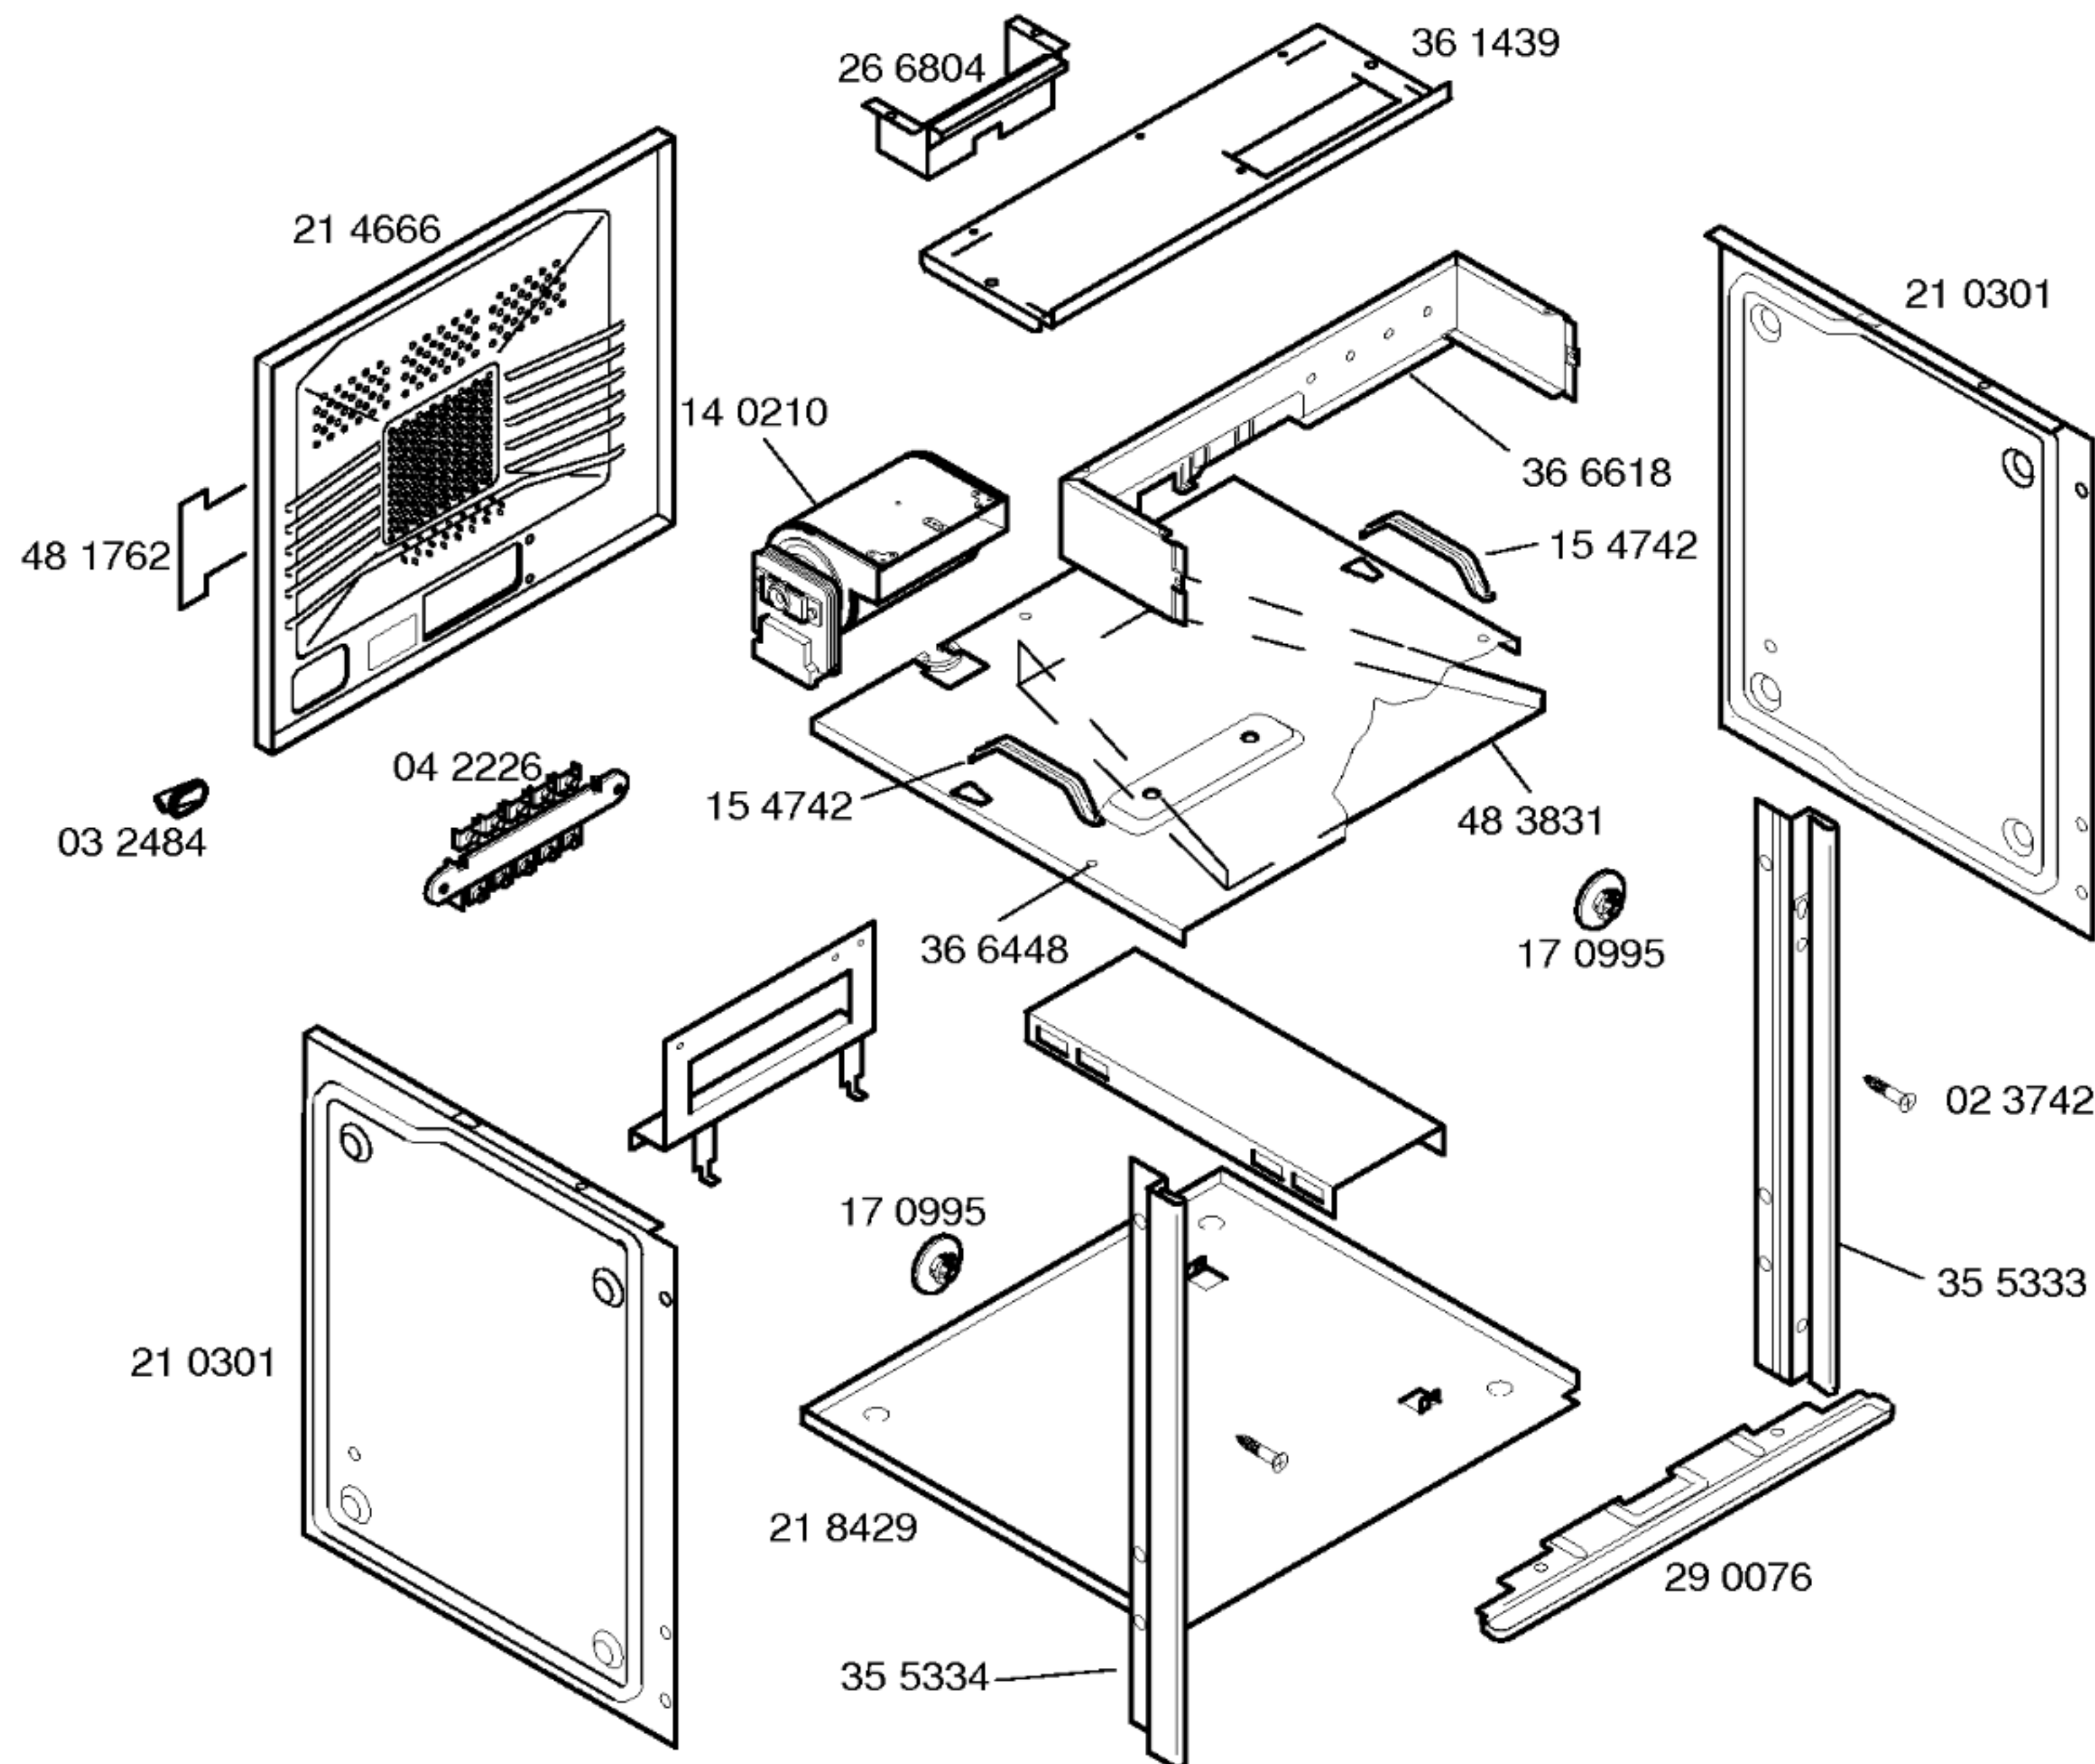

Gebrauchsanweisung
58 0728
(de)

Kochbuch
52 1094
(de)

Zubehör:

Dampfgarer
N8640X0

Bratrost engmaschig
Z1440X0

Bratrost gekröpft
Z1430X0

Bratenblech
Z1510X1

Brotbackstein
Z1910X0

Grillpfanne u. Bratrost
Z1230X0


Nachrüstatz Clou/Kat.
Z1740X0

Nachrüstatz Clou4/Kat.
Z1750X0


Auflaufform
Z1270X0

Backblech Alu
Z1330X0


Backblech email.
Z1340X0

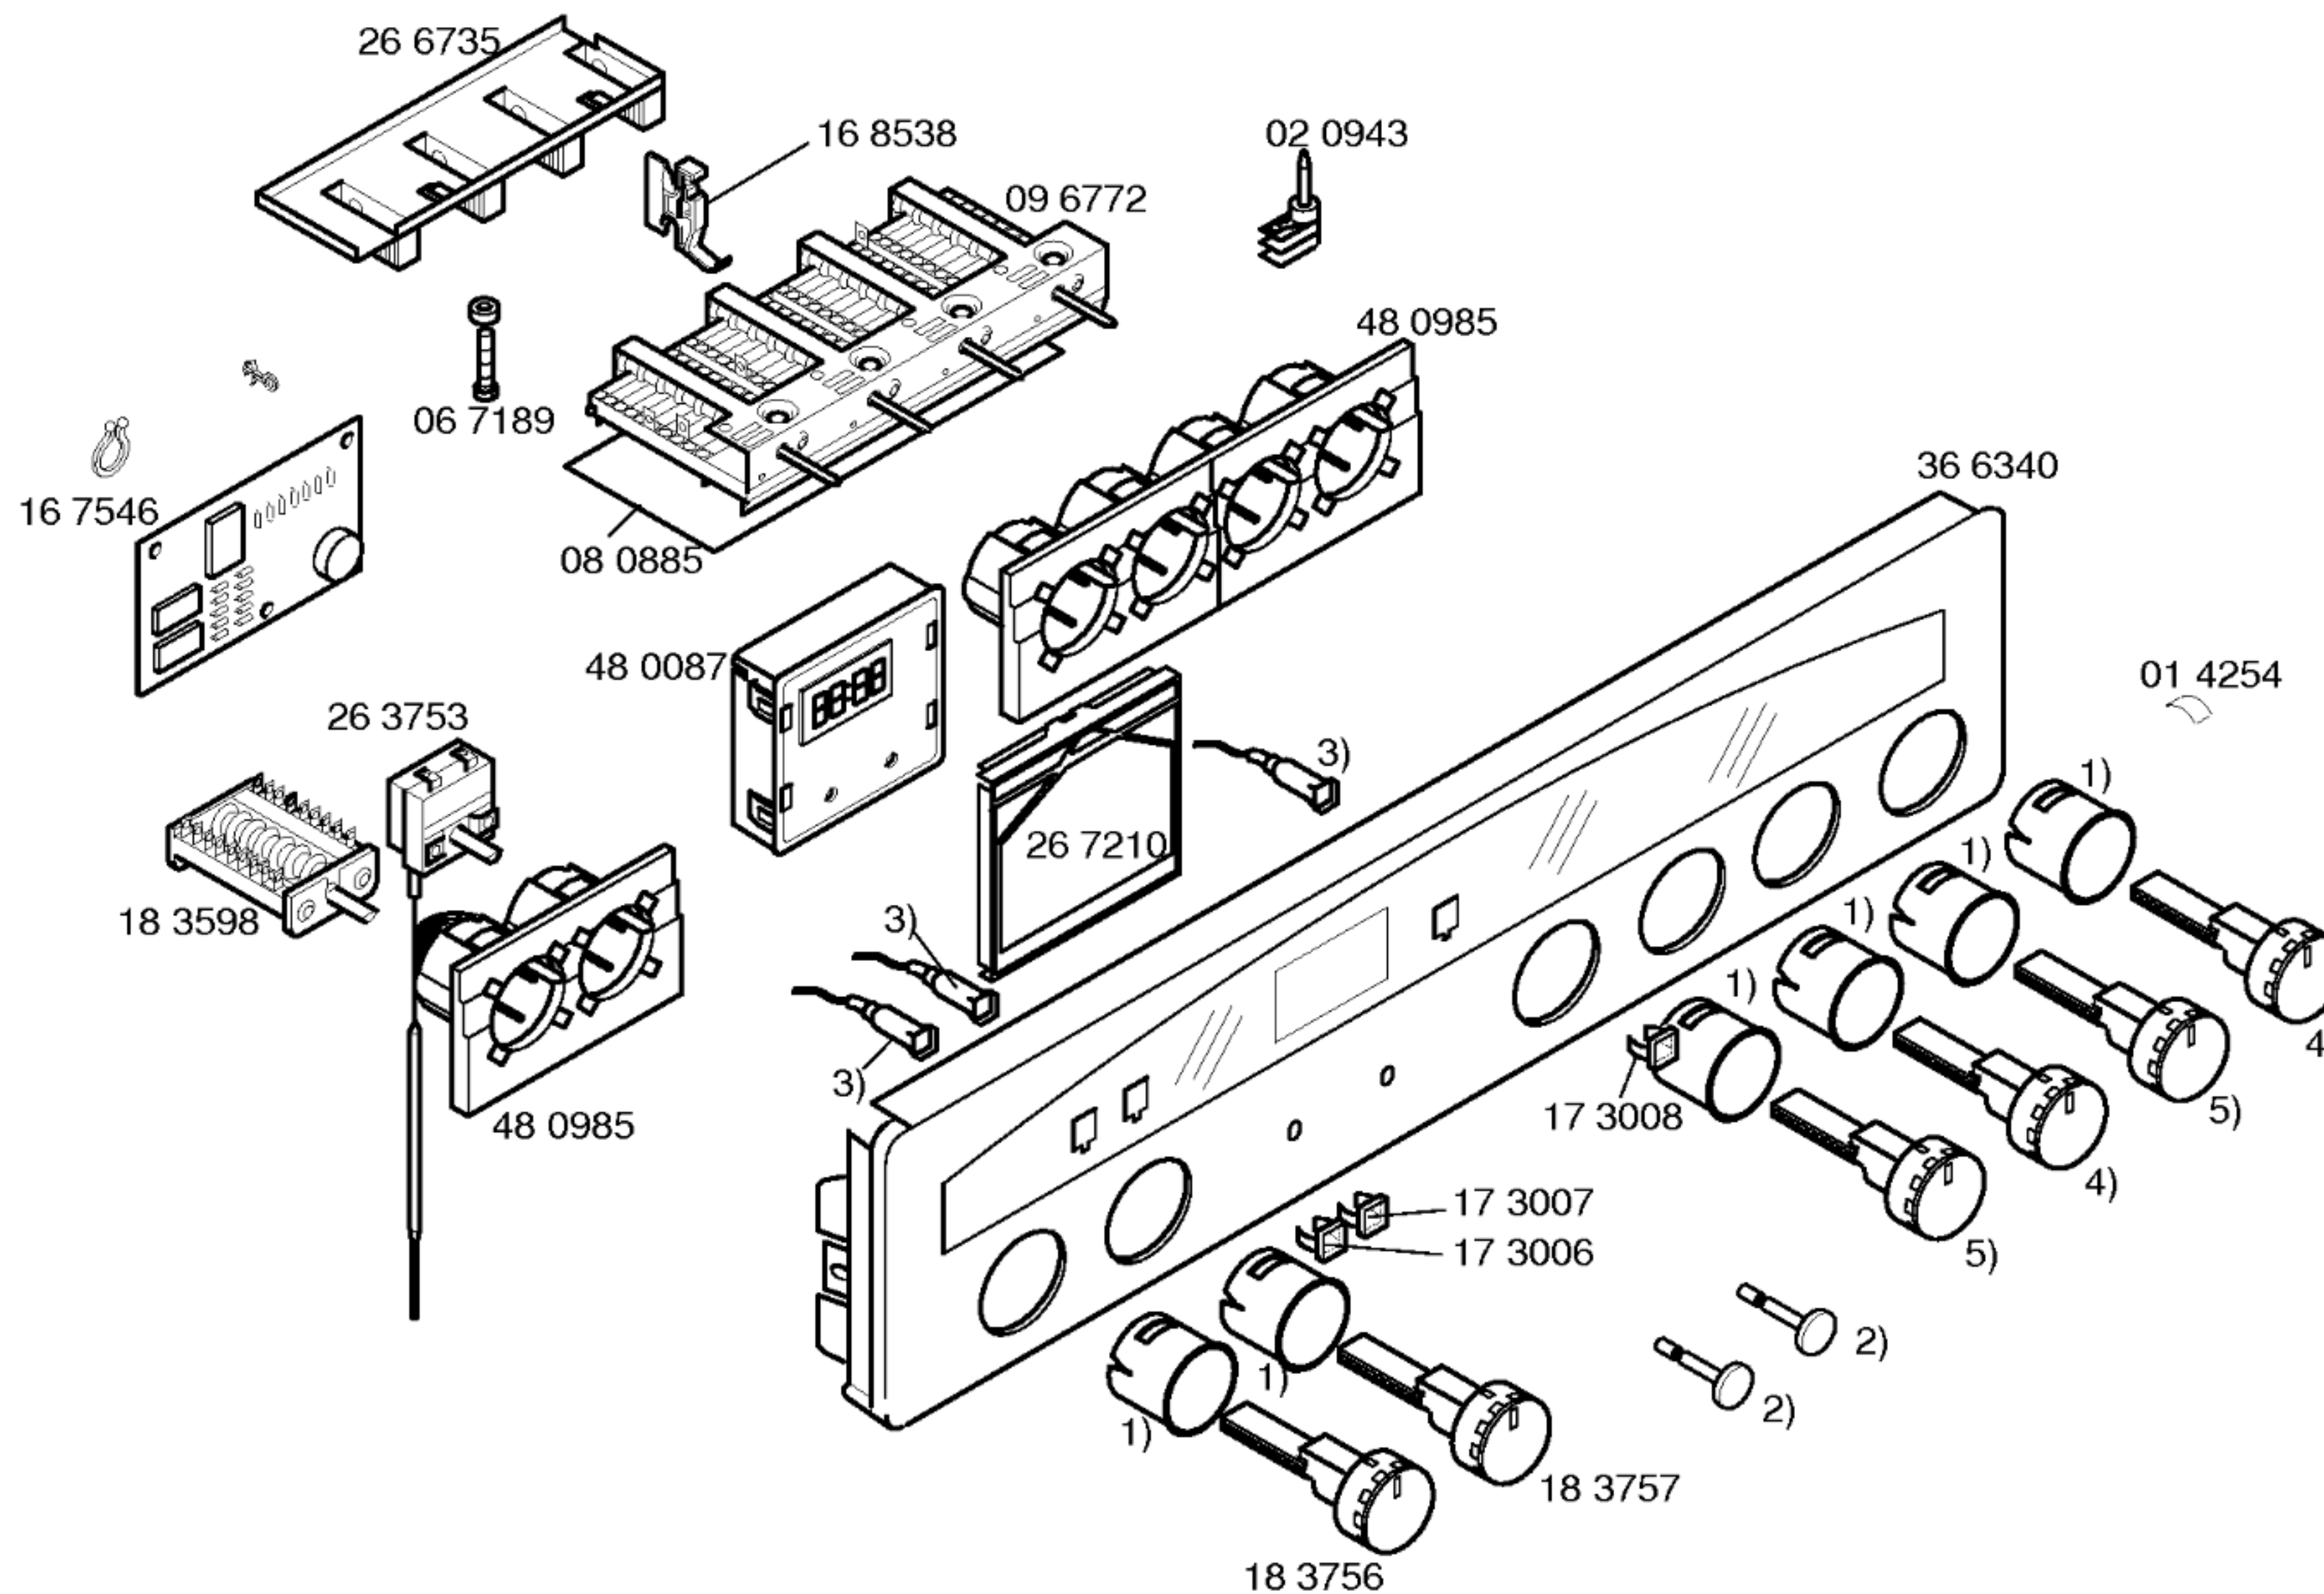

- 1) 18 3758
- 2) 18 2294
- 3) 15 4741
- 4) 18 3307
- 5) 18 3308

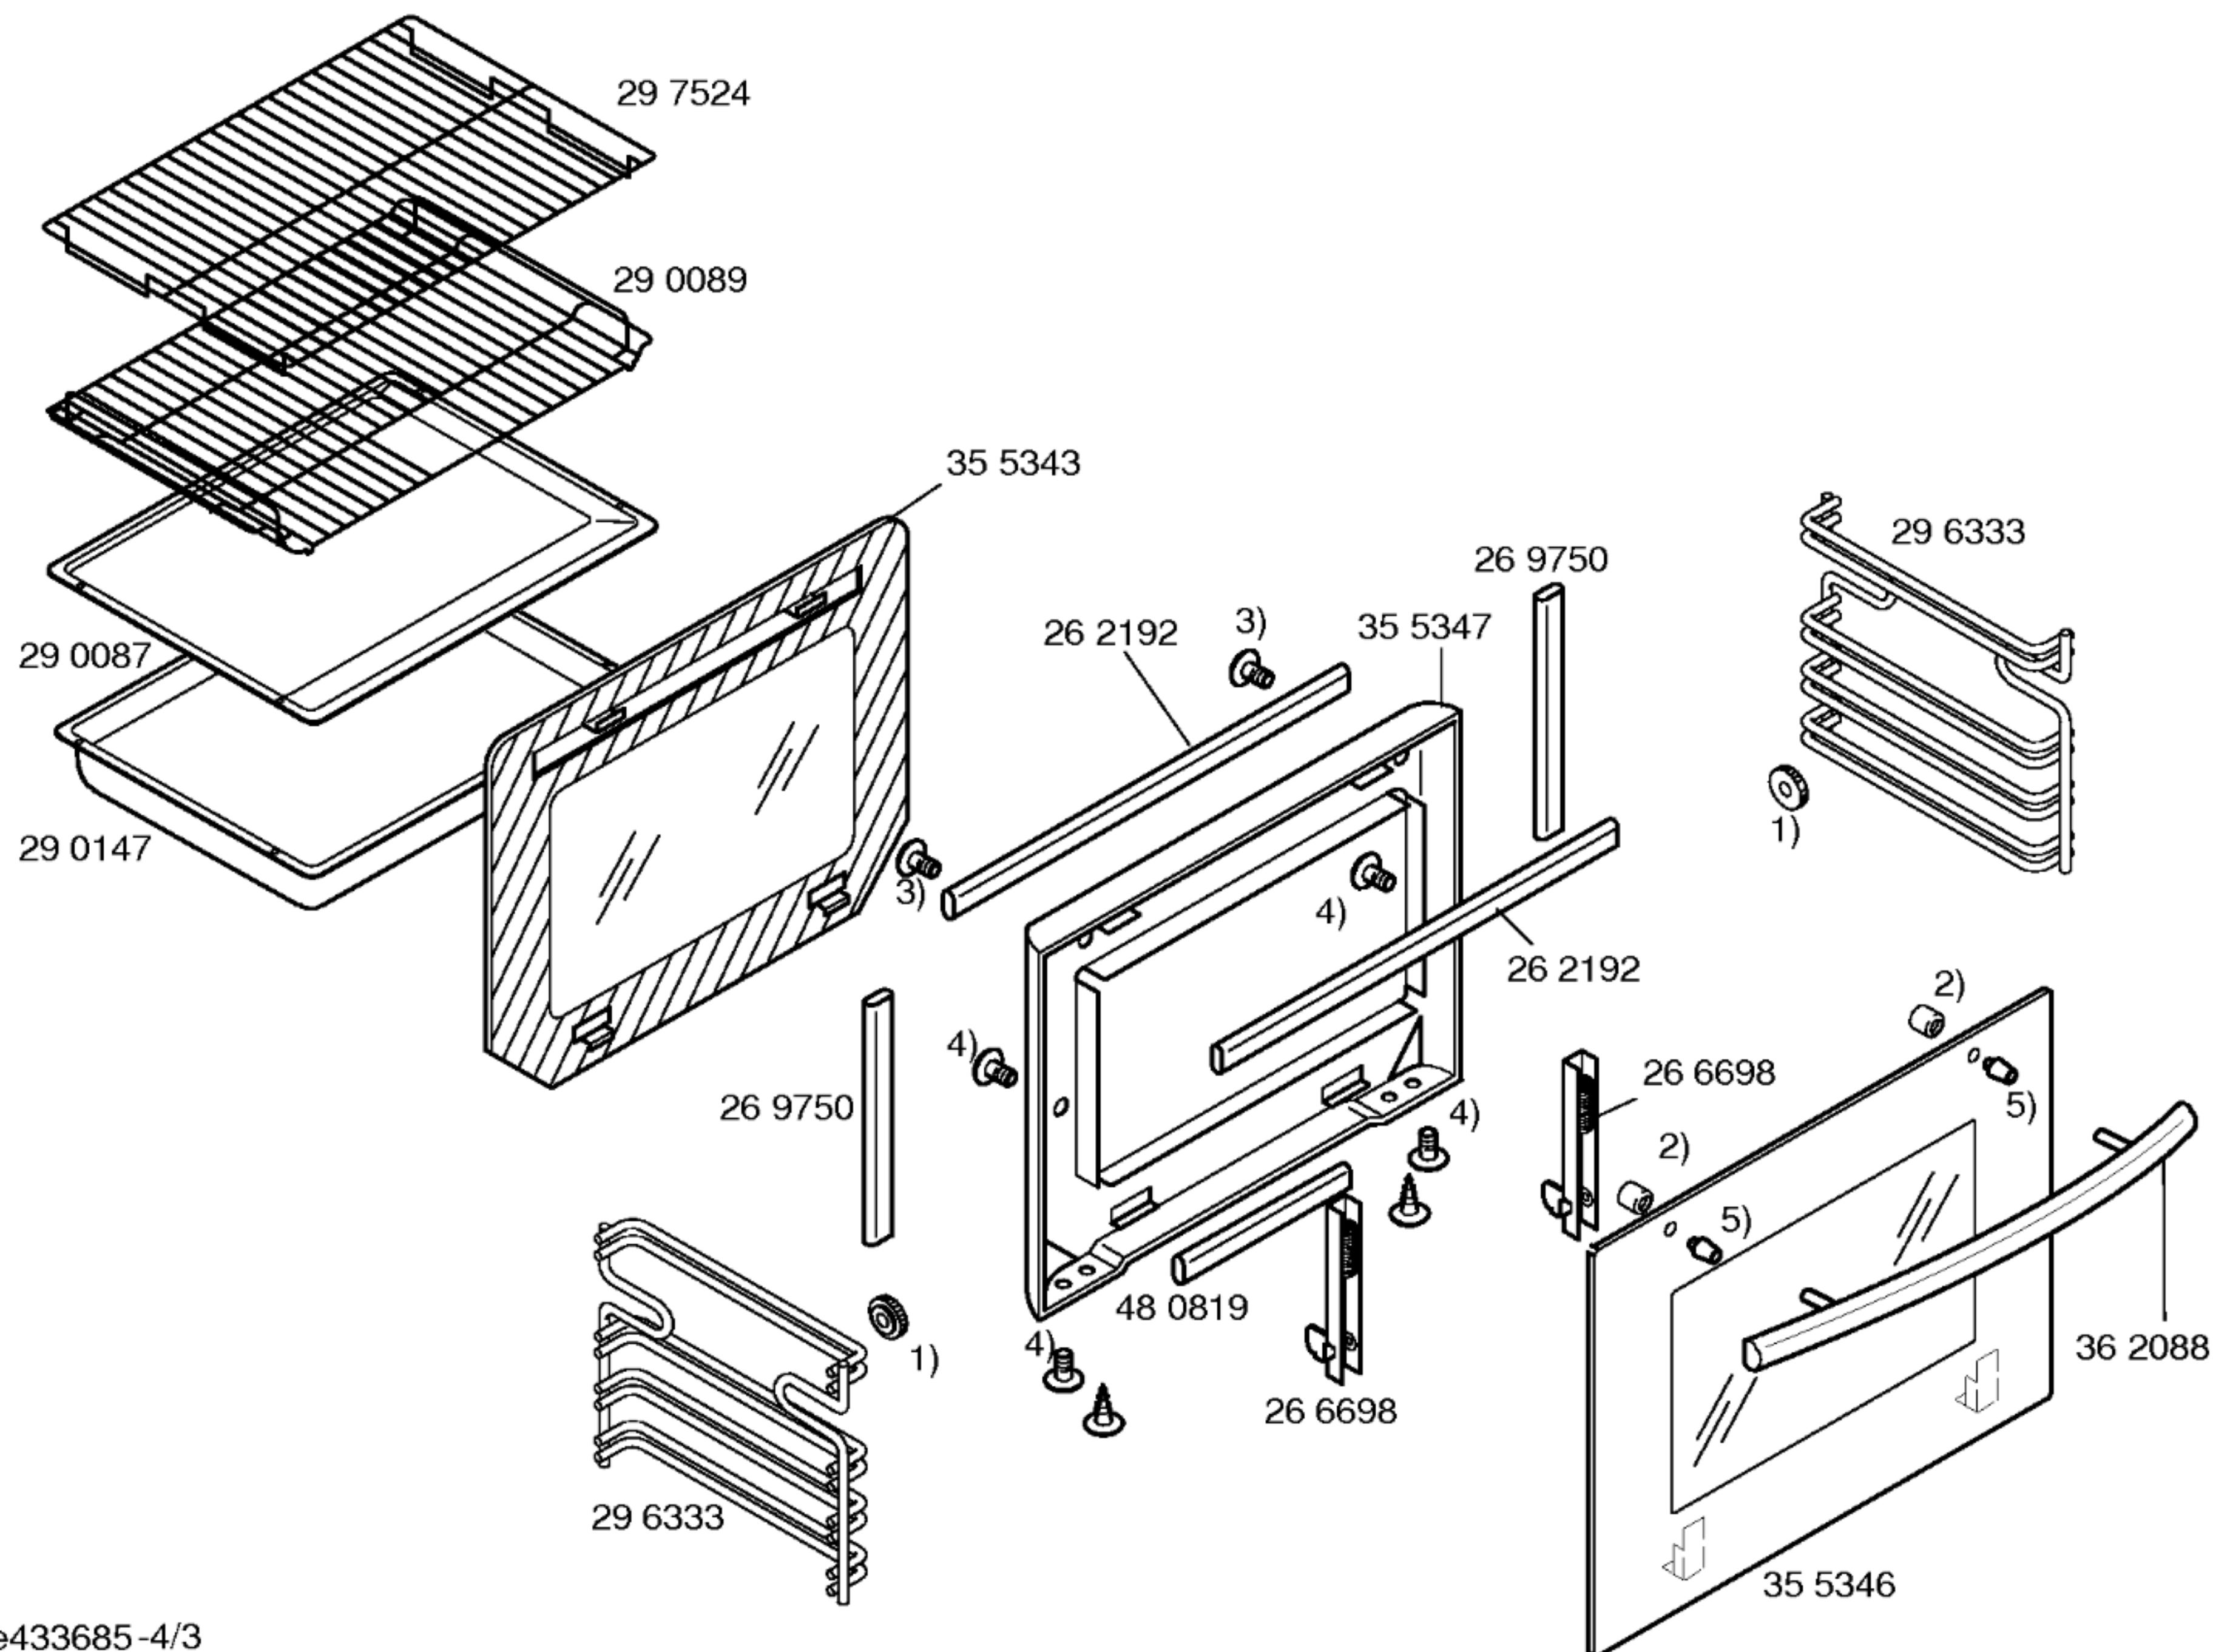

- 1) 02 6593
- 2) 17 2643
- 3) 17 2765
- 4) 17 2646
- 5) 15 9922

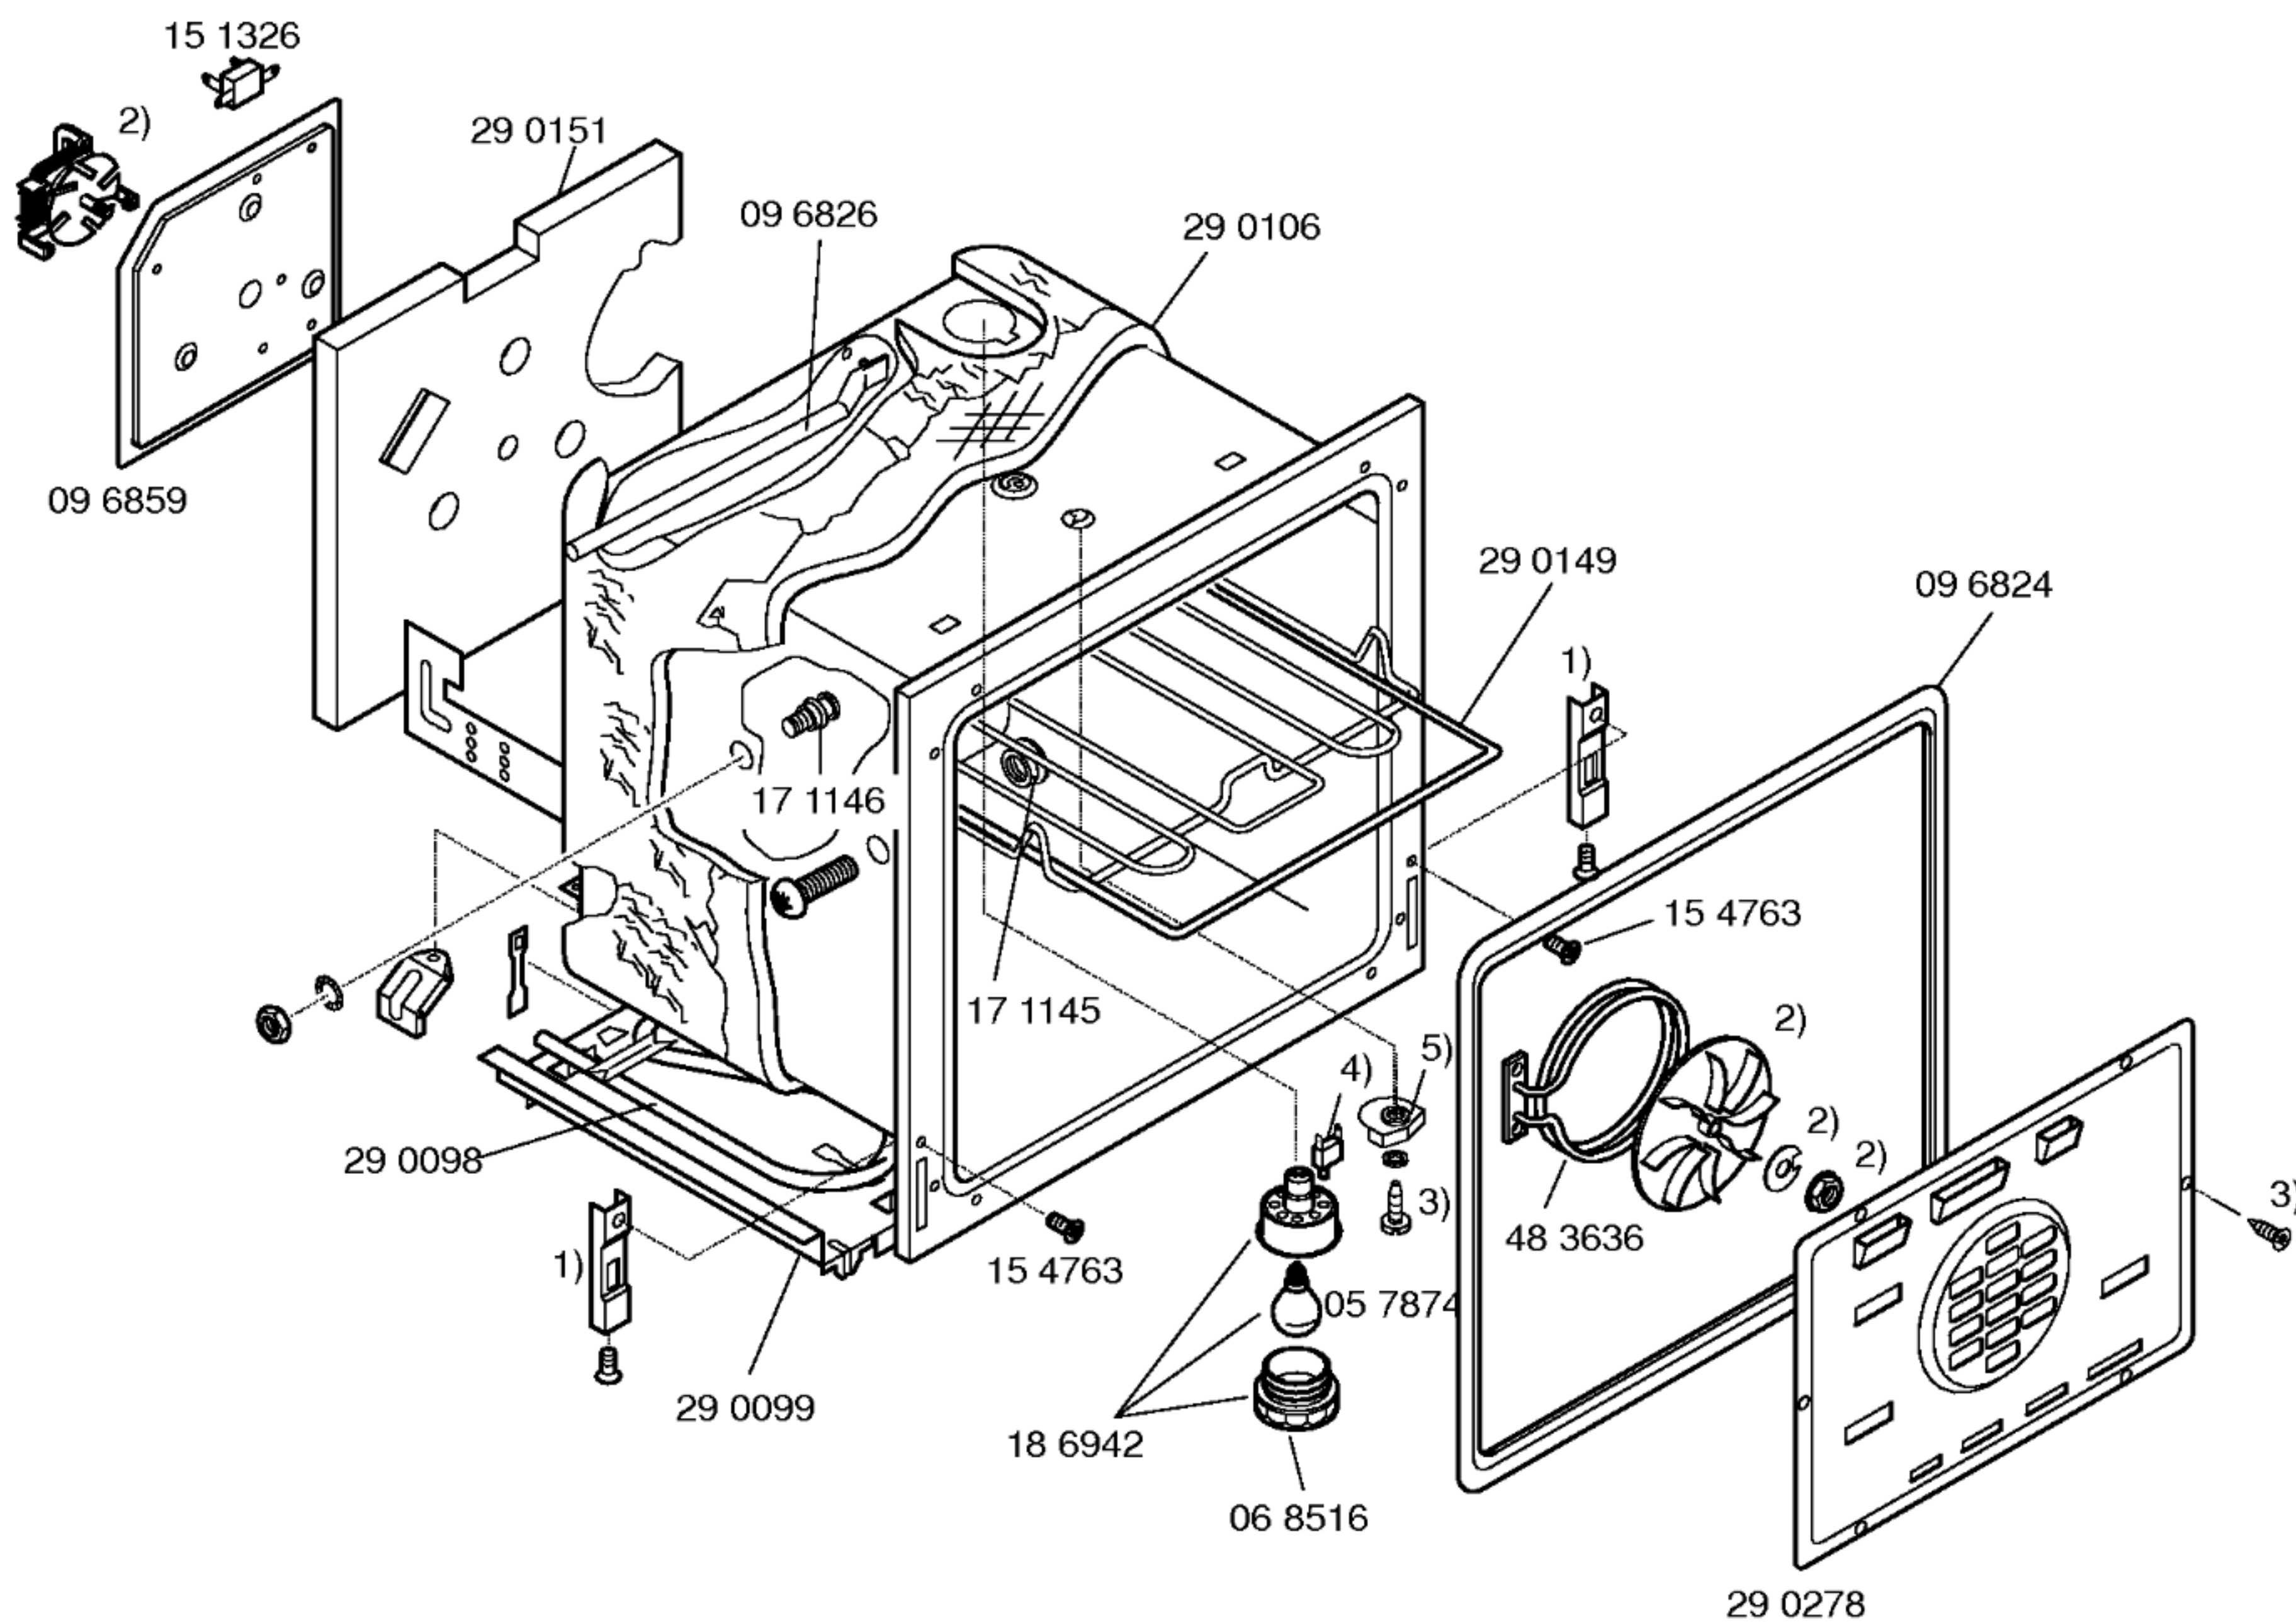

- 1) 17 2647
- 2) 26 1674
- kompl.
- 3) 16 0916
- 4) 15 4836
- 5) 15 5033