

**BOSCH**

GSL8004/01-V01

GSL8004/02-V02

GSL8004/03-V03

KÜHL-,GEFRIERGERÄTE
Gefrierschränke, StandMat. - Nr. - Konstante
3740

Gebrauchsanweisungen

51 6980

(D,GB,F,I,NL,P,E)

51 6981

(S,DK,SF,N)

1) 02 6816

2) 02 6819

3) 02 7786

4) 02 6824

5) 06 8297


6) 06 8299

7) 06 8298

8) 06 8300

9) 02 9978

10) 05 4795

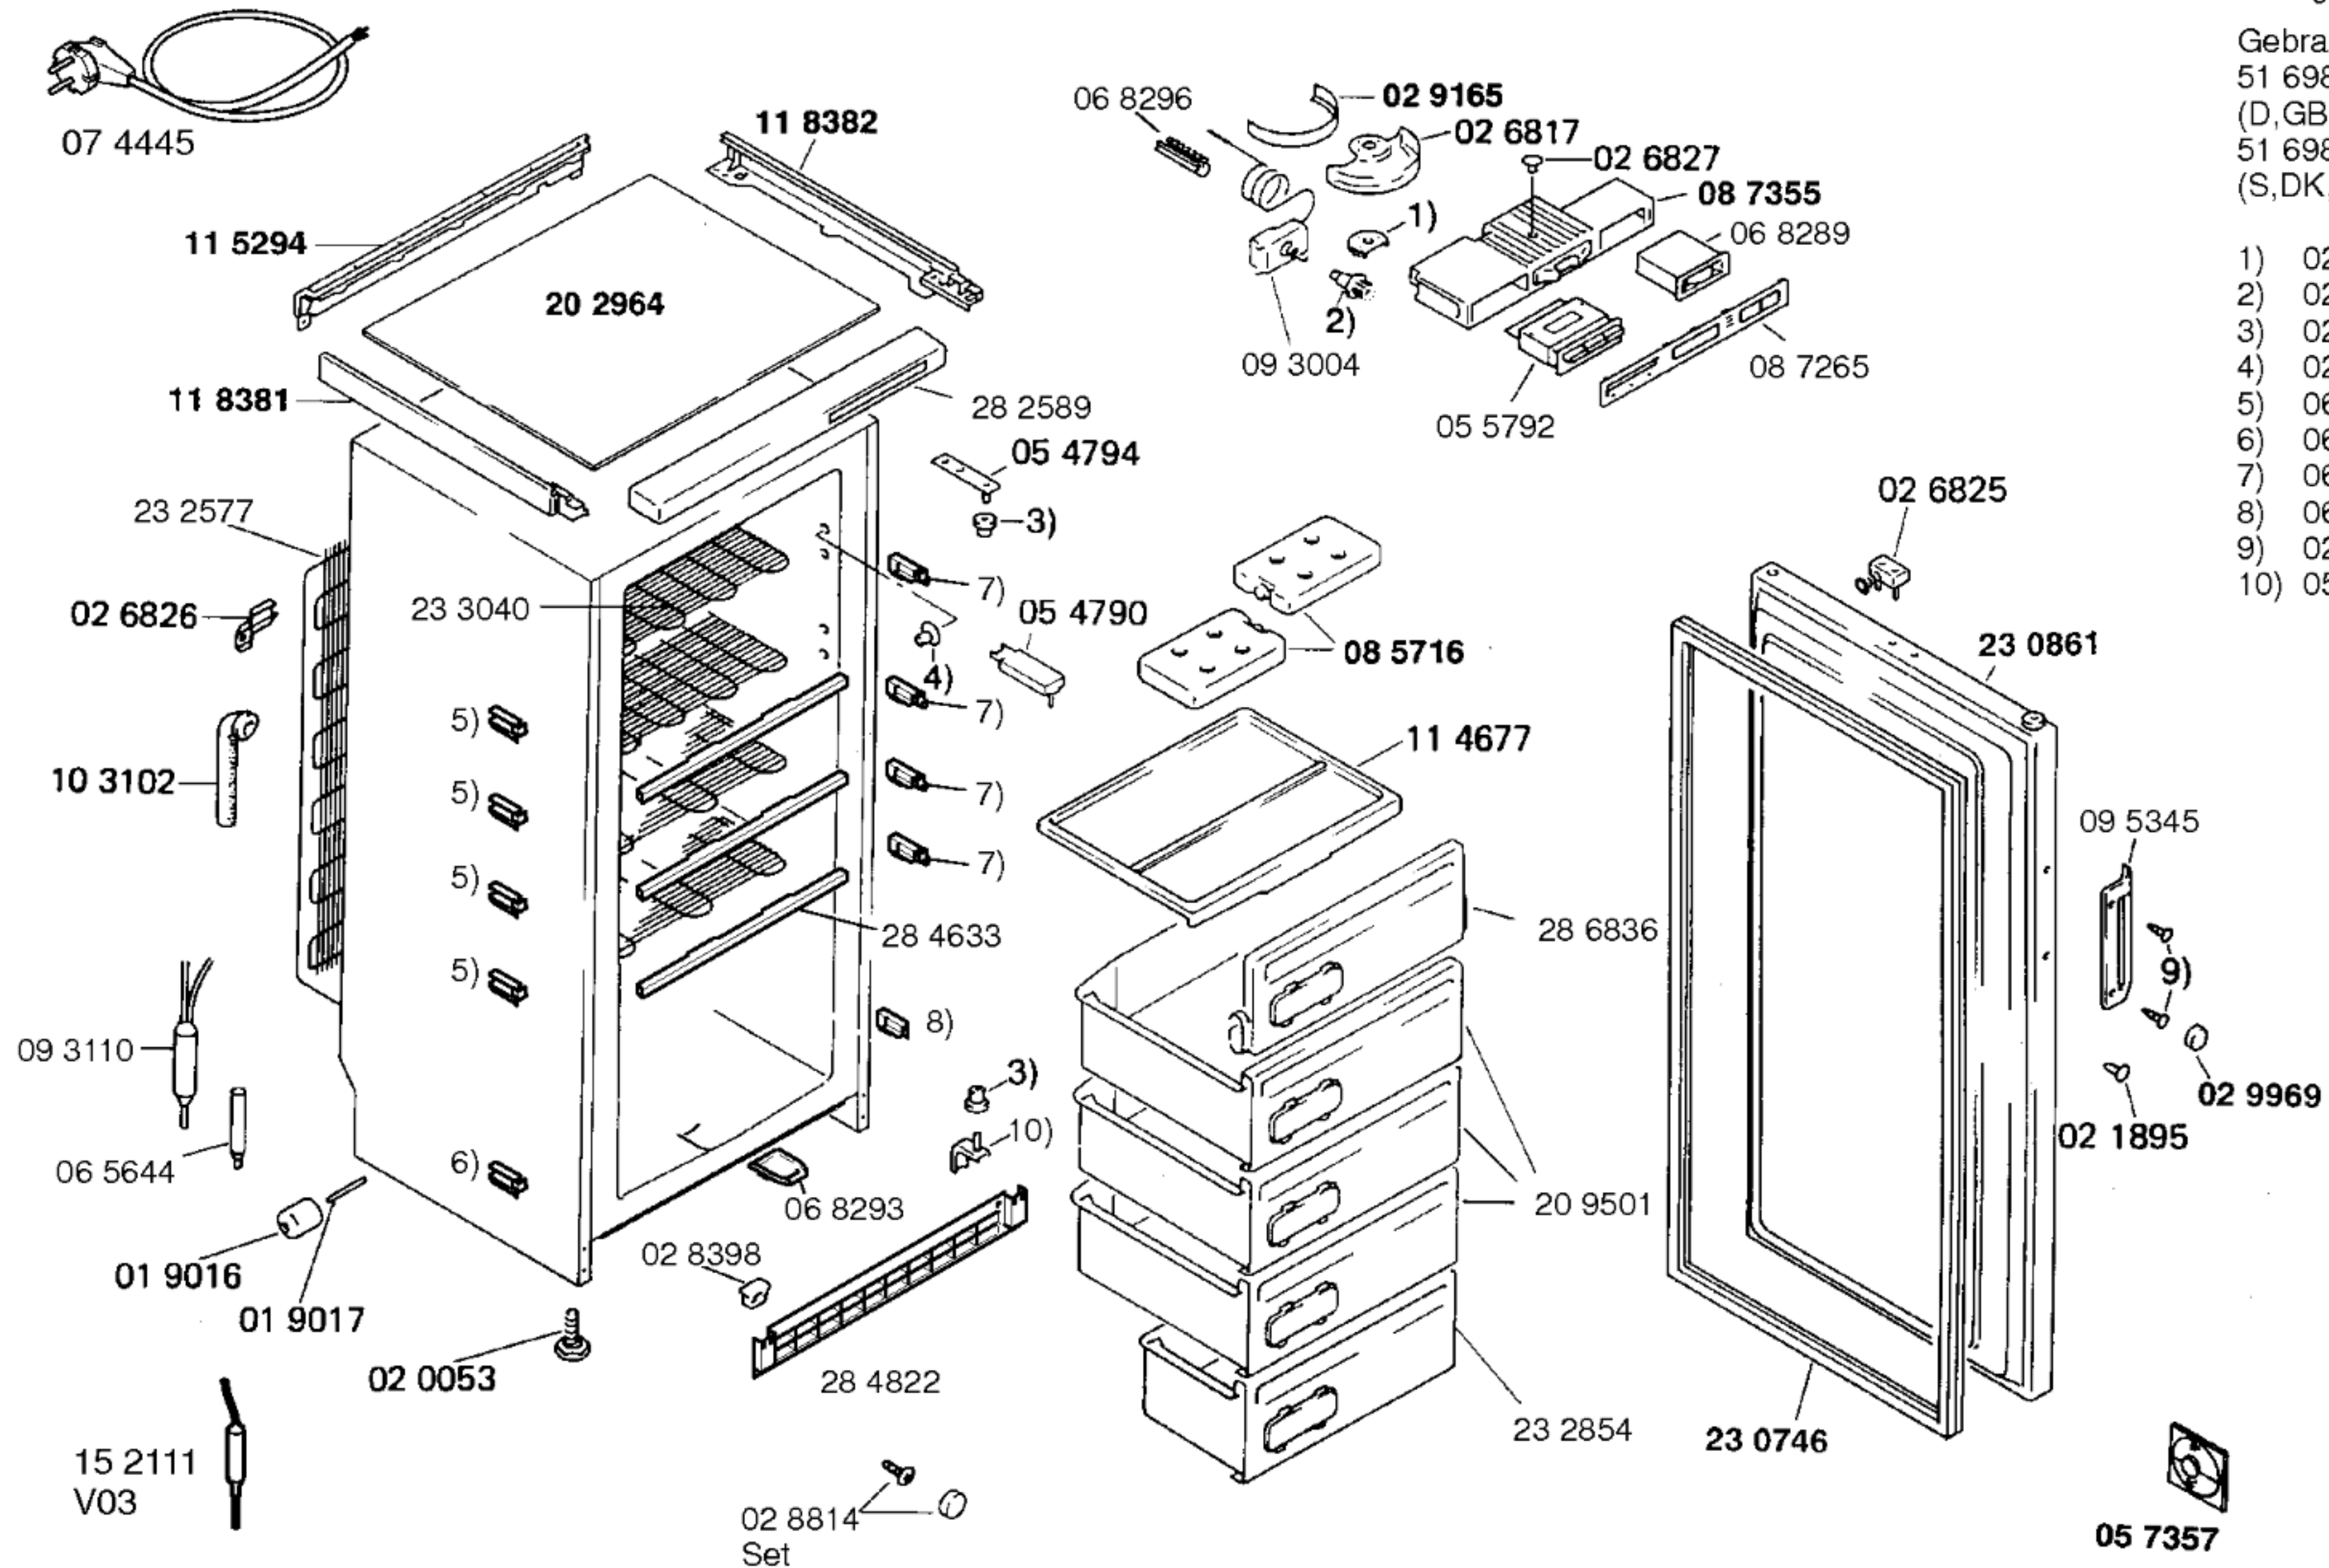


**BOSCH**

GSL8004/01-V01

GSL8004/02-V02

GSL8004/03-V03

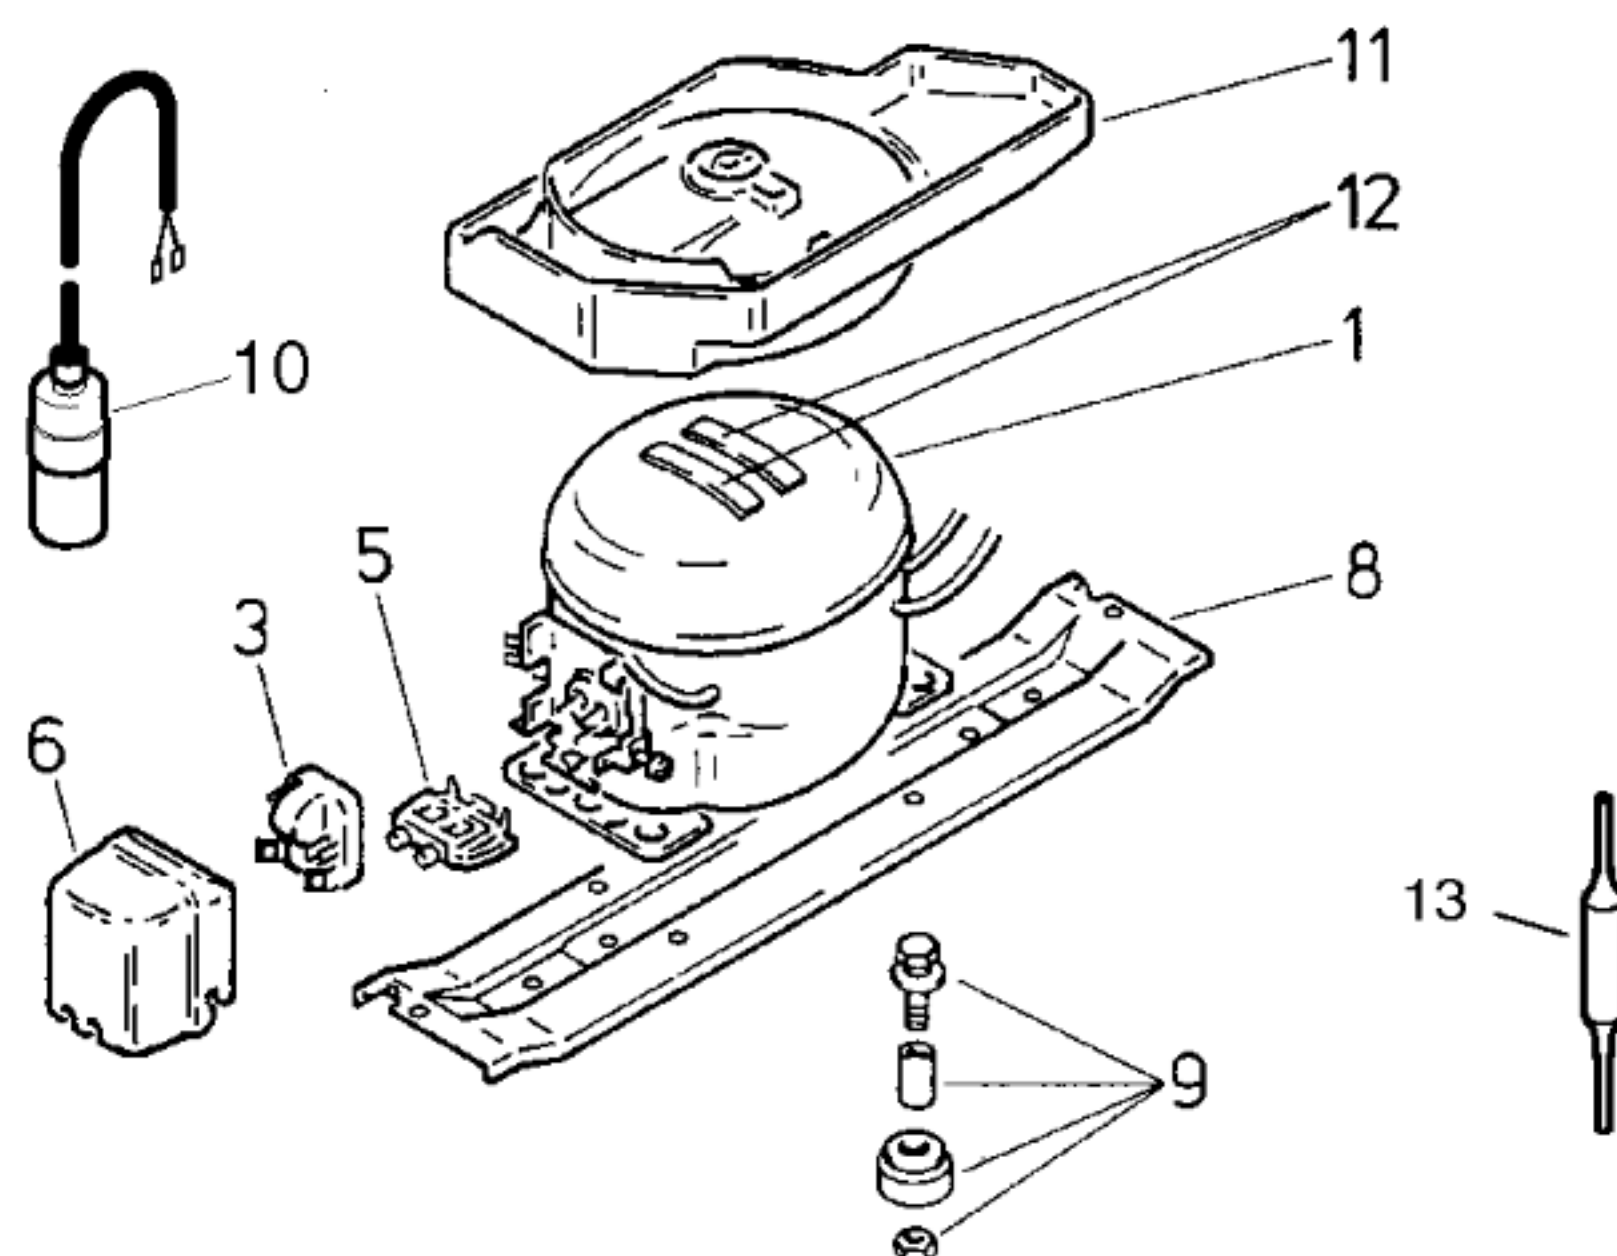KÜHL-,GEFRIERGERÄTE
Gefrierschränke, StandMat. - Nr. - Konstante
3740

	V01	V03	
Pos.	Danfoss	Matsushita	Danfoss
	NLE 11 K	DA 110 E	TLES9K
1	14 1319	14 1324	14 1308
2			
3	15 1055	05 8506	15 1055
4			
5	15 0760		15 0760
6	15 1072	05 8458	15 1072
7			
8	11 1919	11 1919	11 1919
9	05 0166	05 0166	05 0166
10			
11			
12			
13		35 0026	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Danfoss	Matsushita	Danfoss
Typ/Type	NLE 11 K	DA 110 E	TLES 9 K
Förderleistung/Delivery/Débit	2007 l/h	1980	1589
Anlaufstrom/Starting current/Cour de démarrage	10,7 A	8,7	
Widerstand/Resistance/Résistance	12,9 Ω	12	
	18 Ω	28,7	
Temp.-Regler/Thermostat	Danfoss		
Typ/Type	077B2157		
Reglerstellung/Position	kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-22 -14	
Valeurs de commutation	„aus“	-32 -22	
	(„abtauen“ od.) „alarm“	-17,5 -10	
Füllmenge/Fill.quantity/Charge	R600a g	65	
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		