


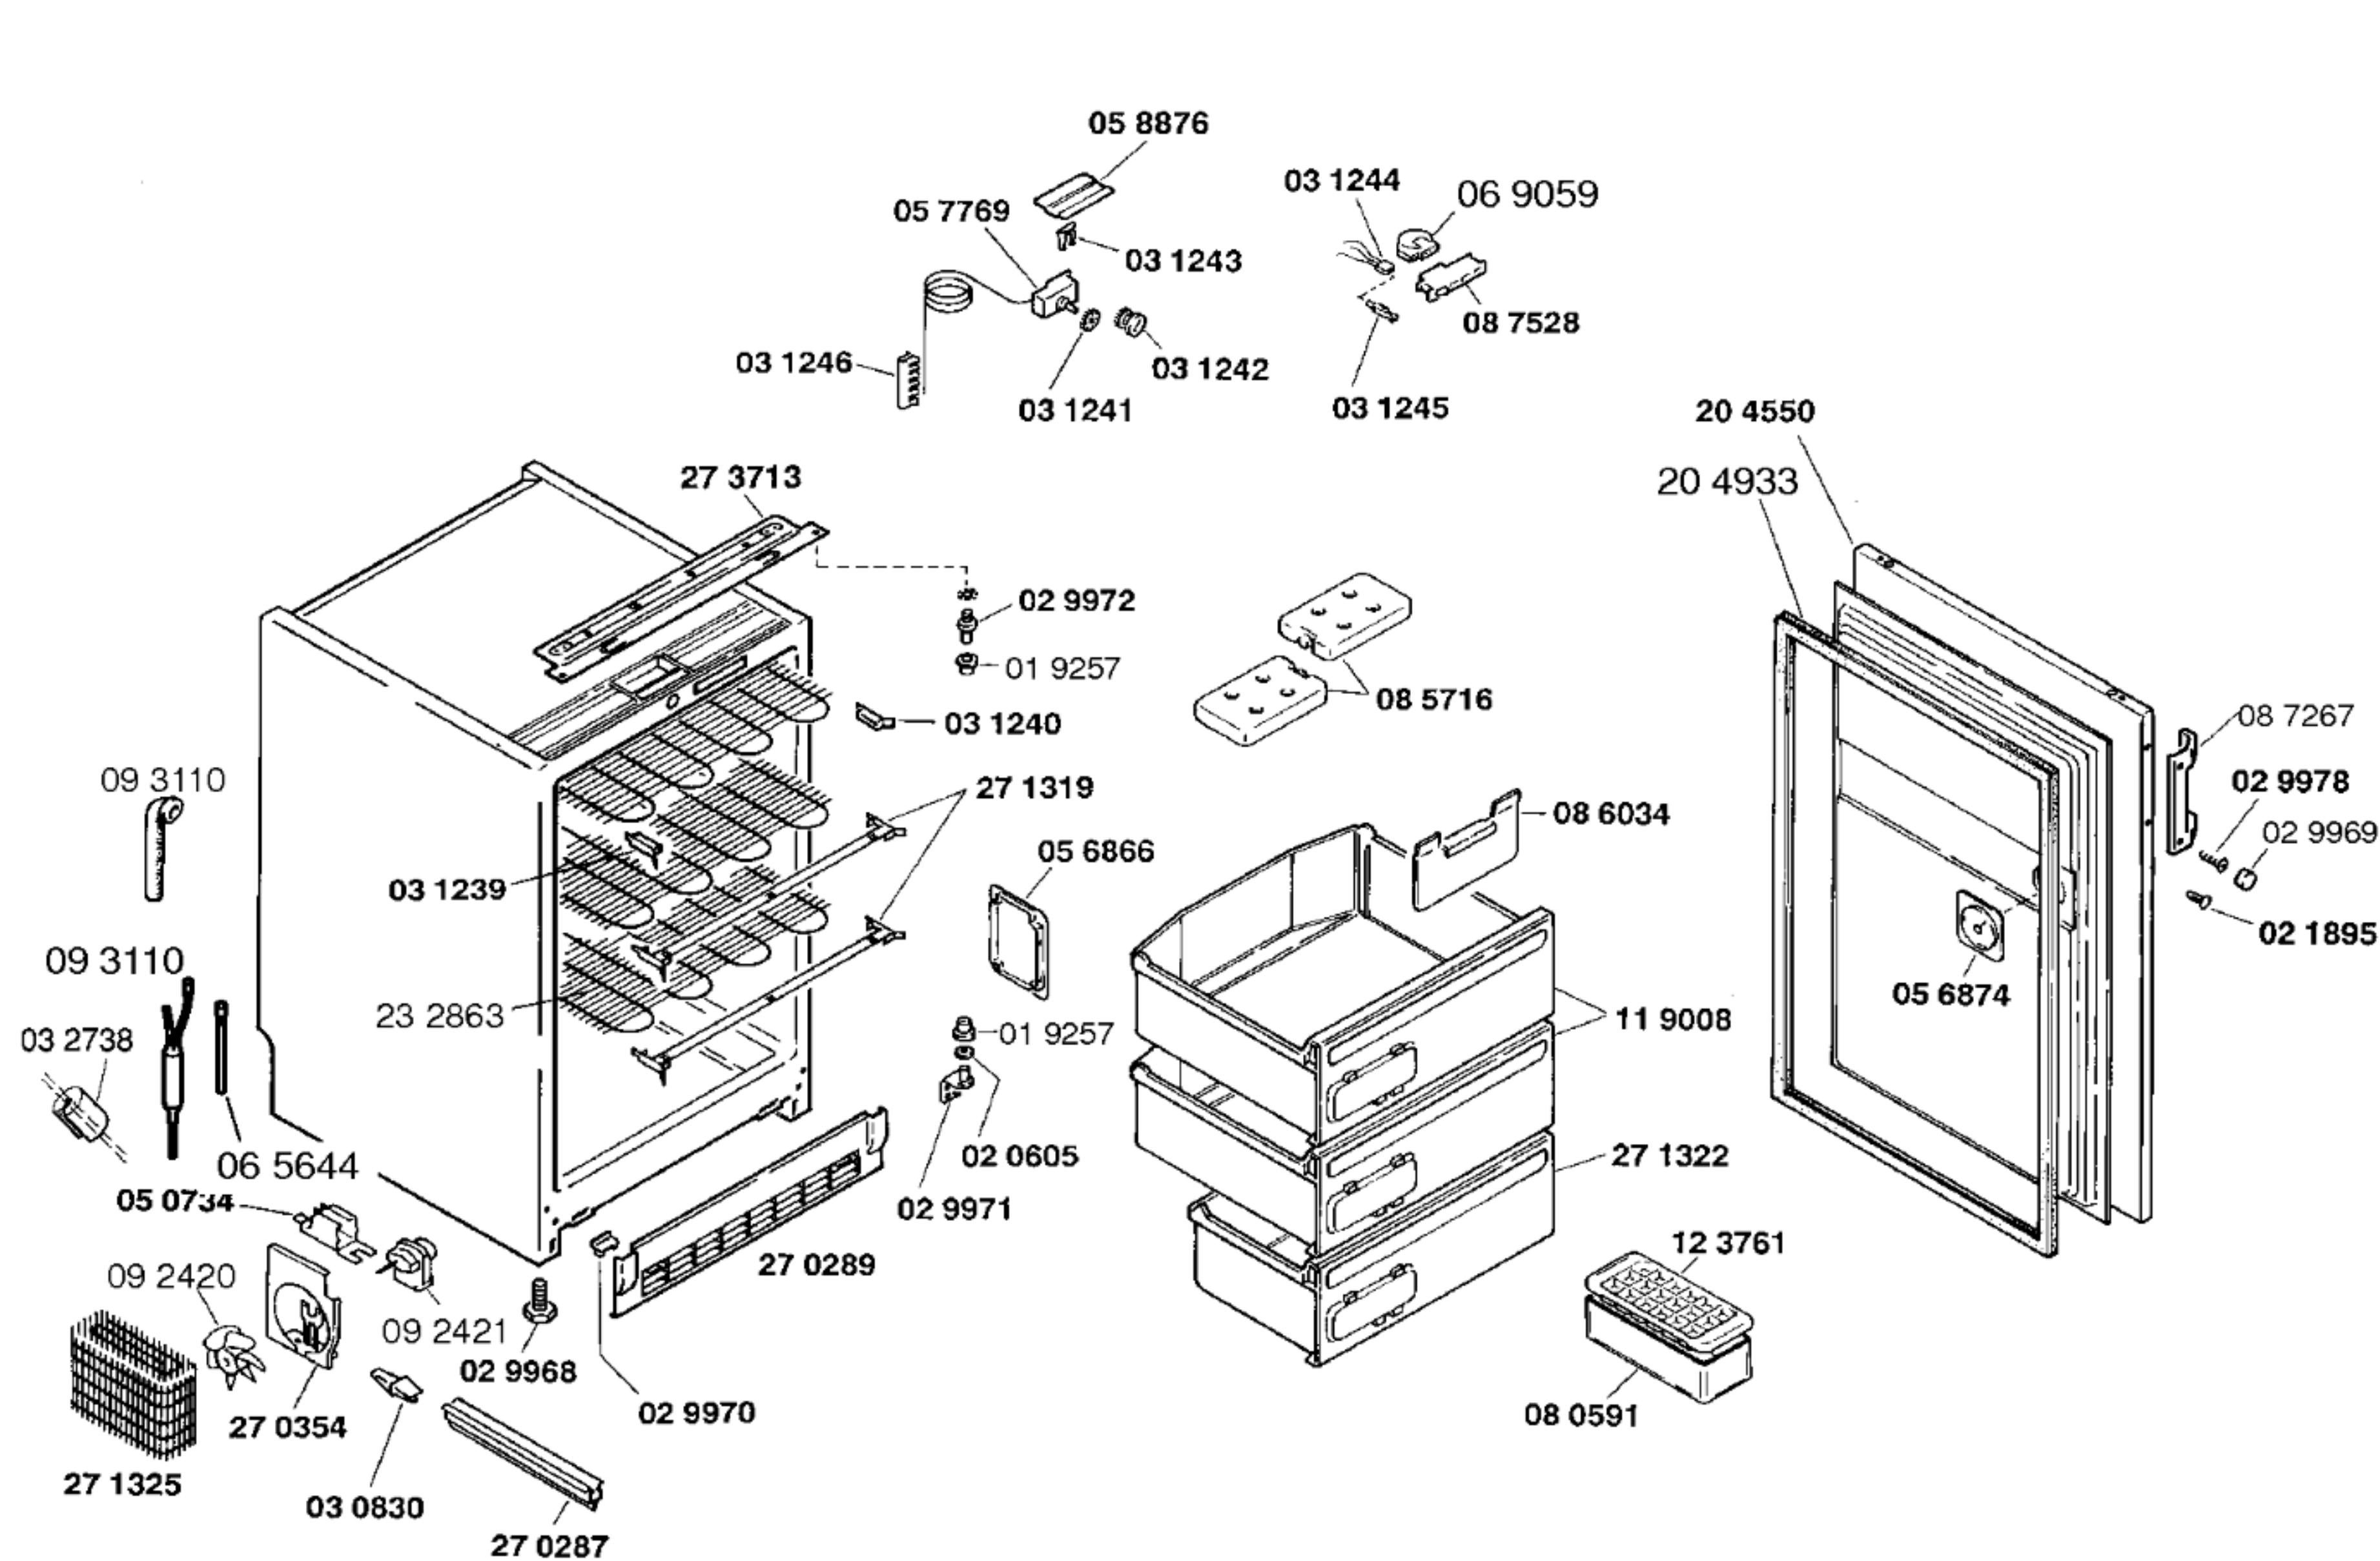


51 5901
Gebrauchsanweisung
(D,GB,F,I,NL,SF)
51 4009
Montageanleitung
(D,GB,I,NL,S,SF,E,P,
DK,N)

Zubehör:

Dekorrahmen
KZ10160, braun
KZ10170, Aluminium
KZ10180, weiss

Sockel
KZ11120

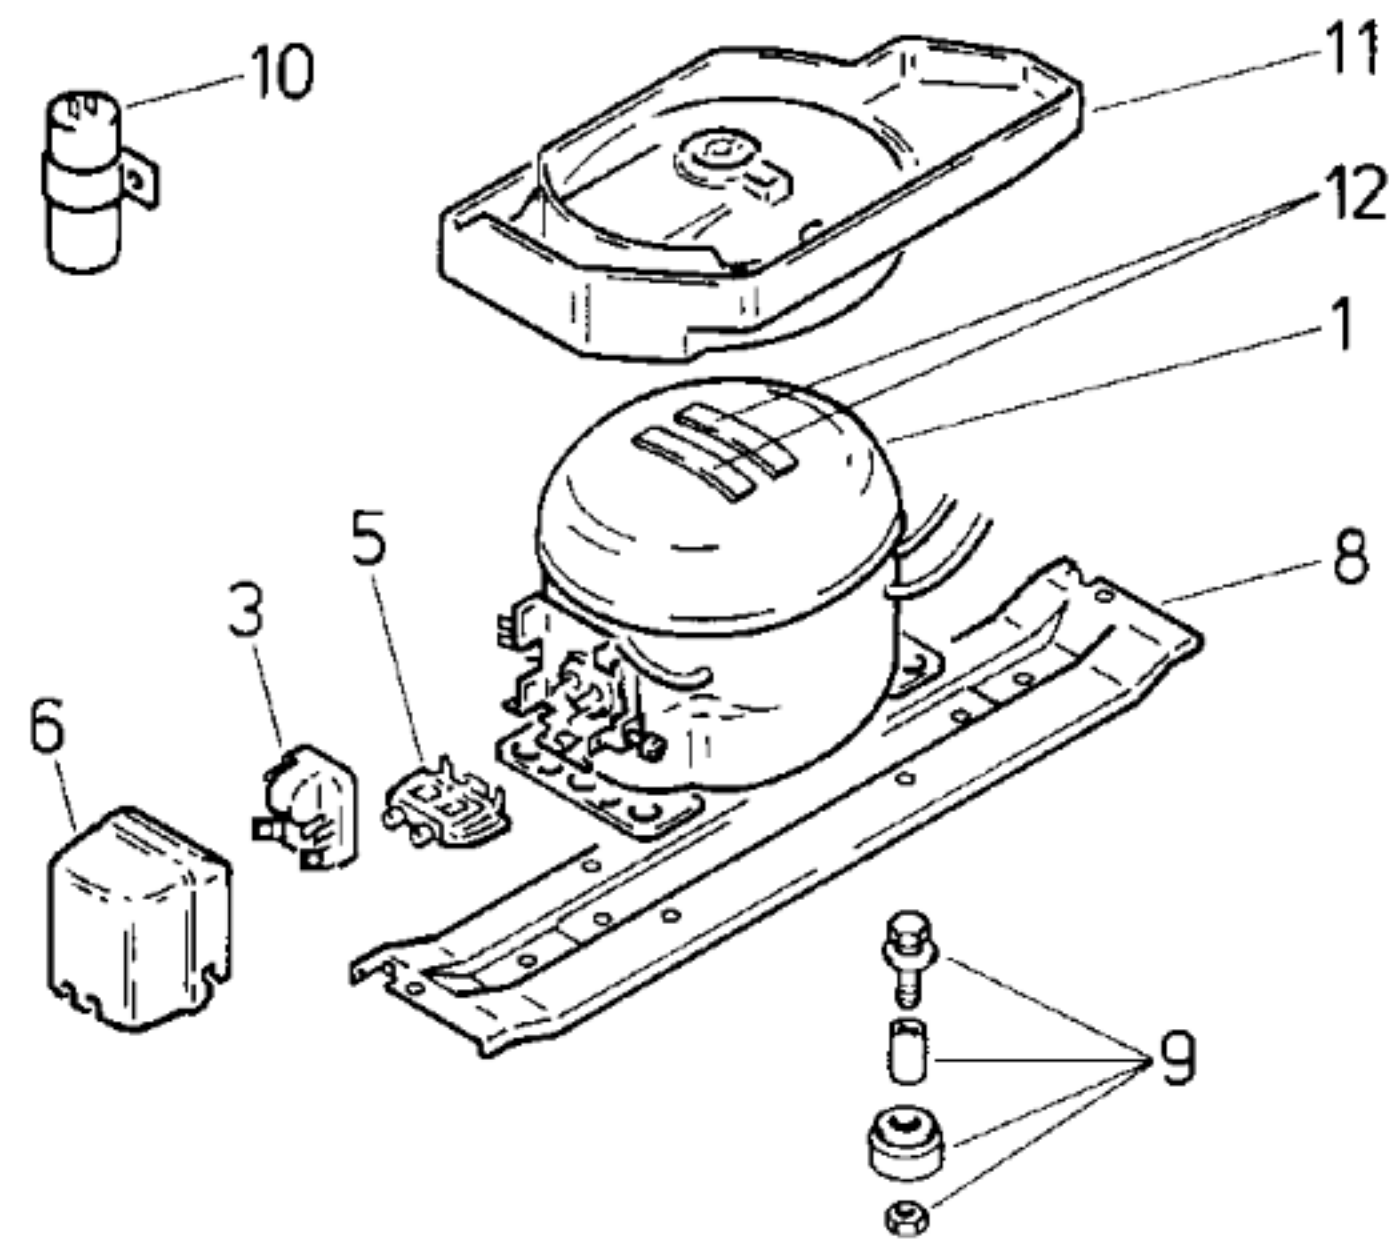

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLS 5 F		
Förderleistung/Delivery/Débit	l/h	914		
Anlaufstrom/Starting current/Cour de démarrage	A	9,0		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	16,0		
	Hi/aux Ω	17,0		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 SF2		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-25 -17		
Valeurs de commutation	„aus“	-33 -23		
	(„abtauen“ od.) „alarm“	-19,5 -13		
Füllmenge/Fill.quantity/Charge	R134a g	120		
Anschlußwert/Conn.load/Puiss. connectée	W	120		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω	190		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

	V01	V02	
Pos.	Danfoss	Danfoss	
	TLS 5 F	TLES5F	
1	14 1250	14 1242	
2			
3	15 1055	15 1055	
4			
5	15 1053	15 1053	
6	15 1072	15 1072	
7			
8	27 0291	27 0291	
9	05 0166	05 0166	
10			
11			
12			