

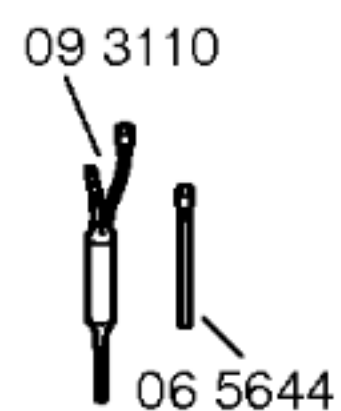


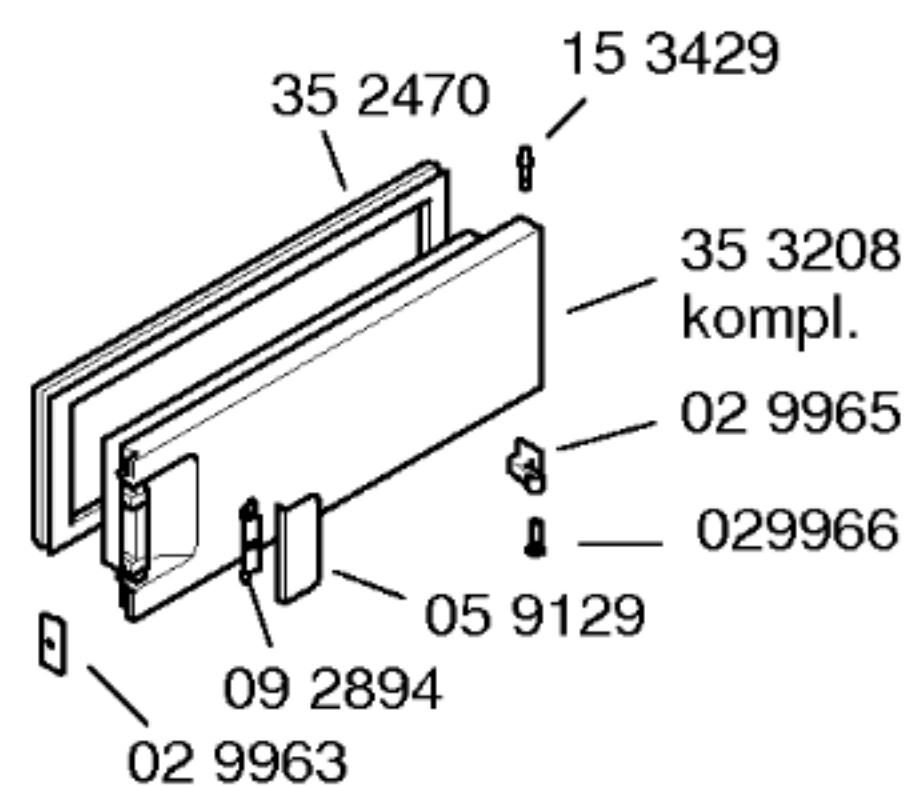



07 4445

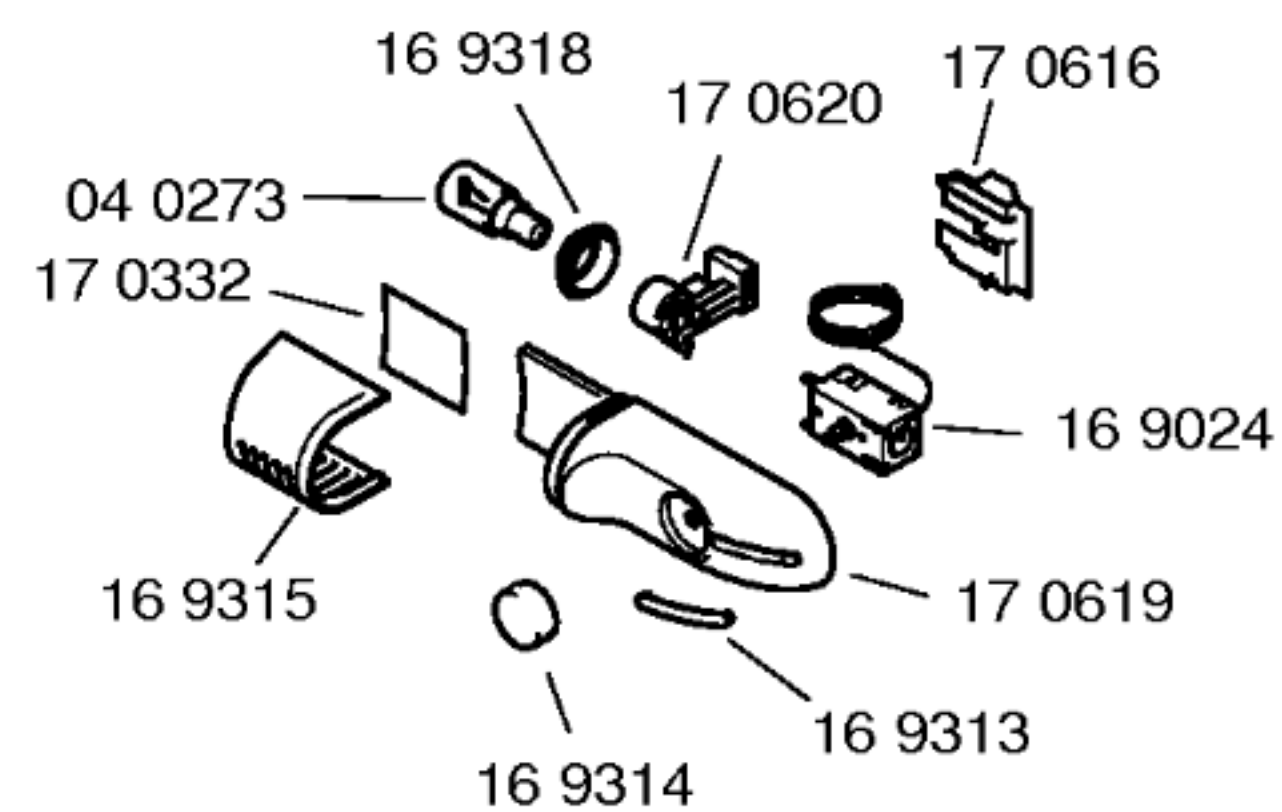

Gebrauchsanweisung
52 2548
(D,GB,F,I,NL)

Montageanleitung
52 2494Beistellsatz
26 5163

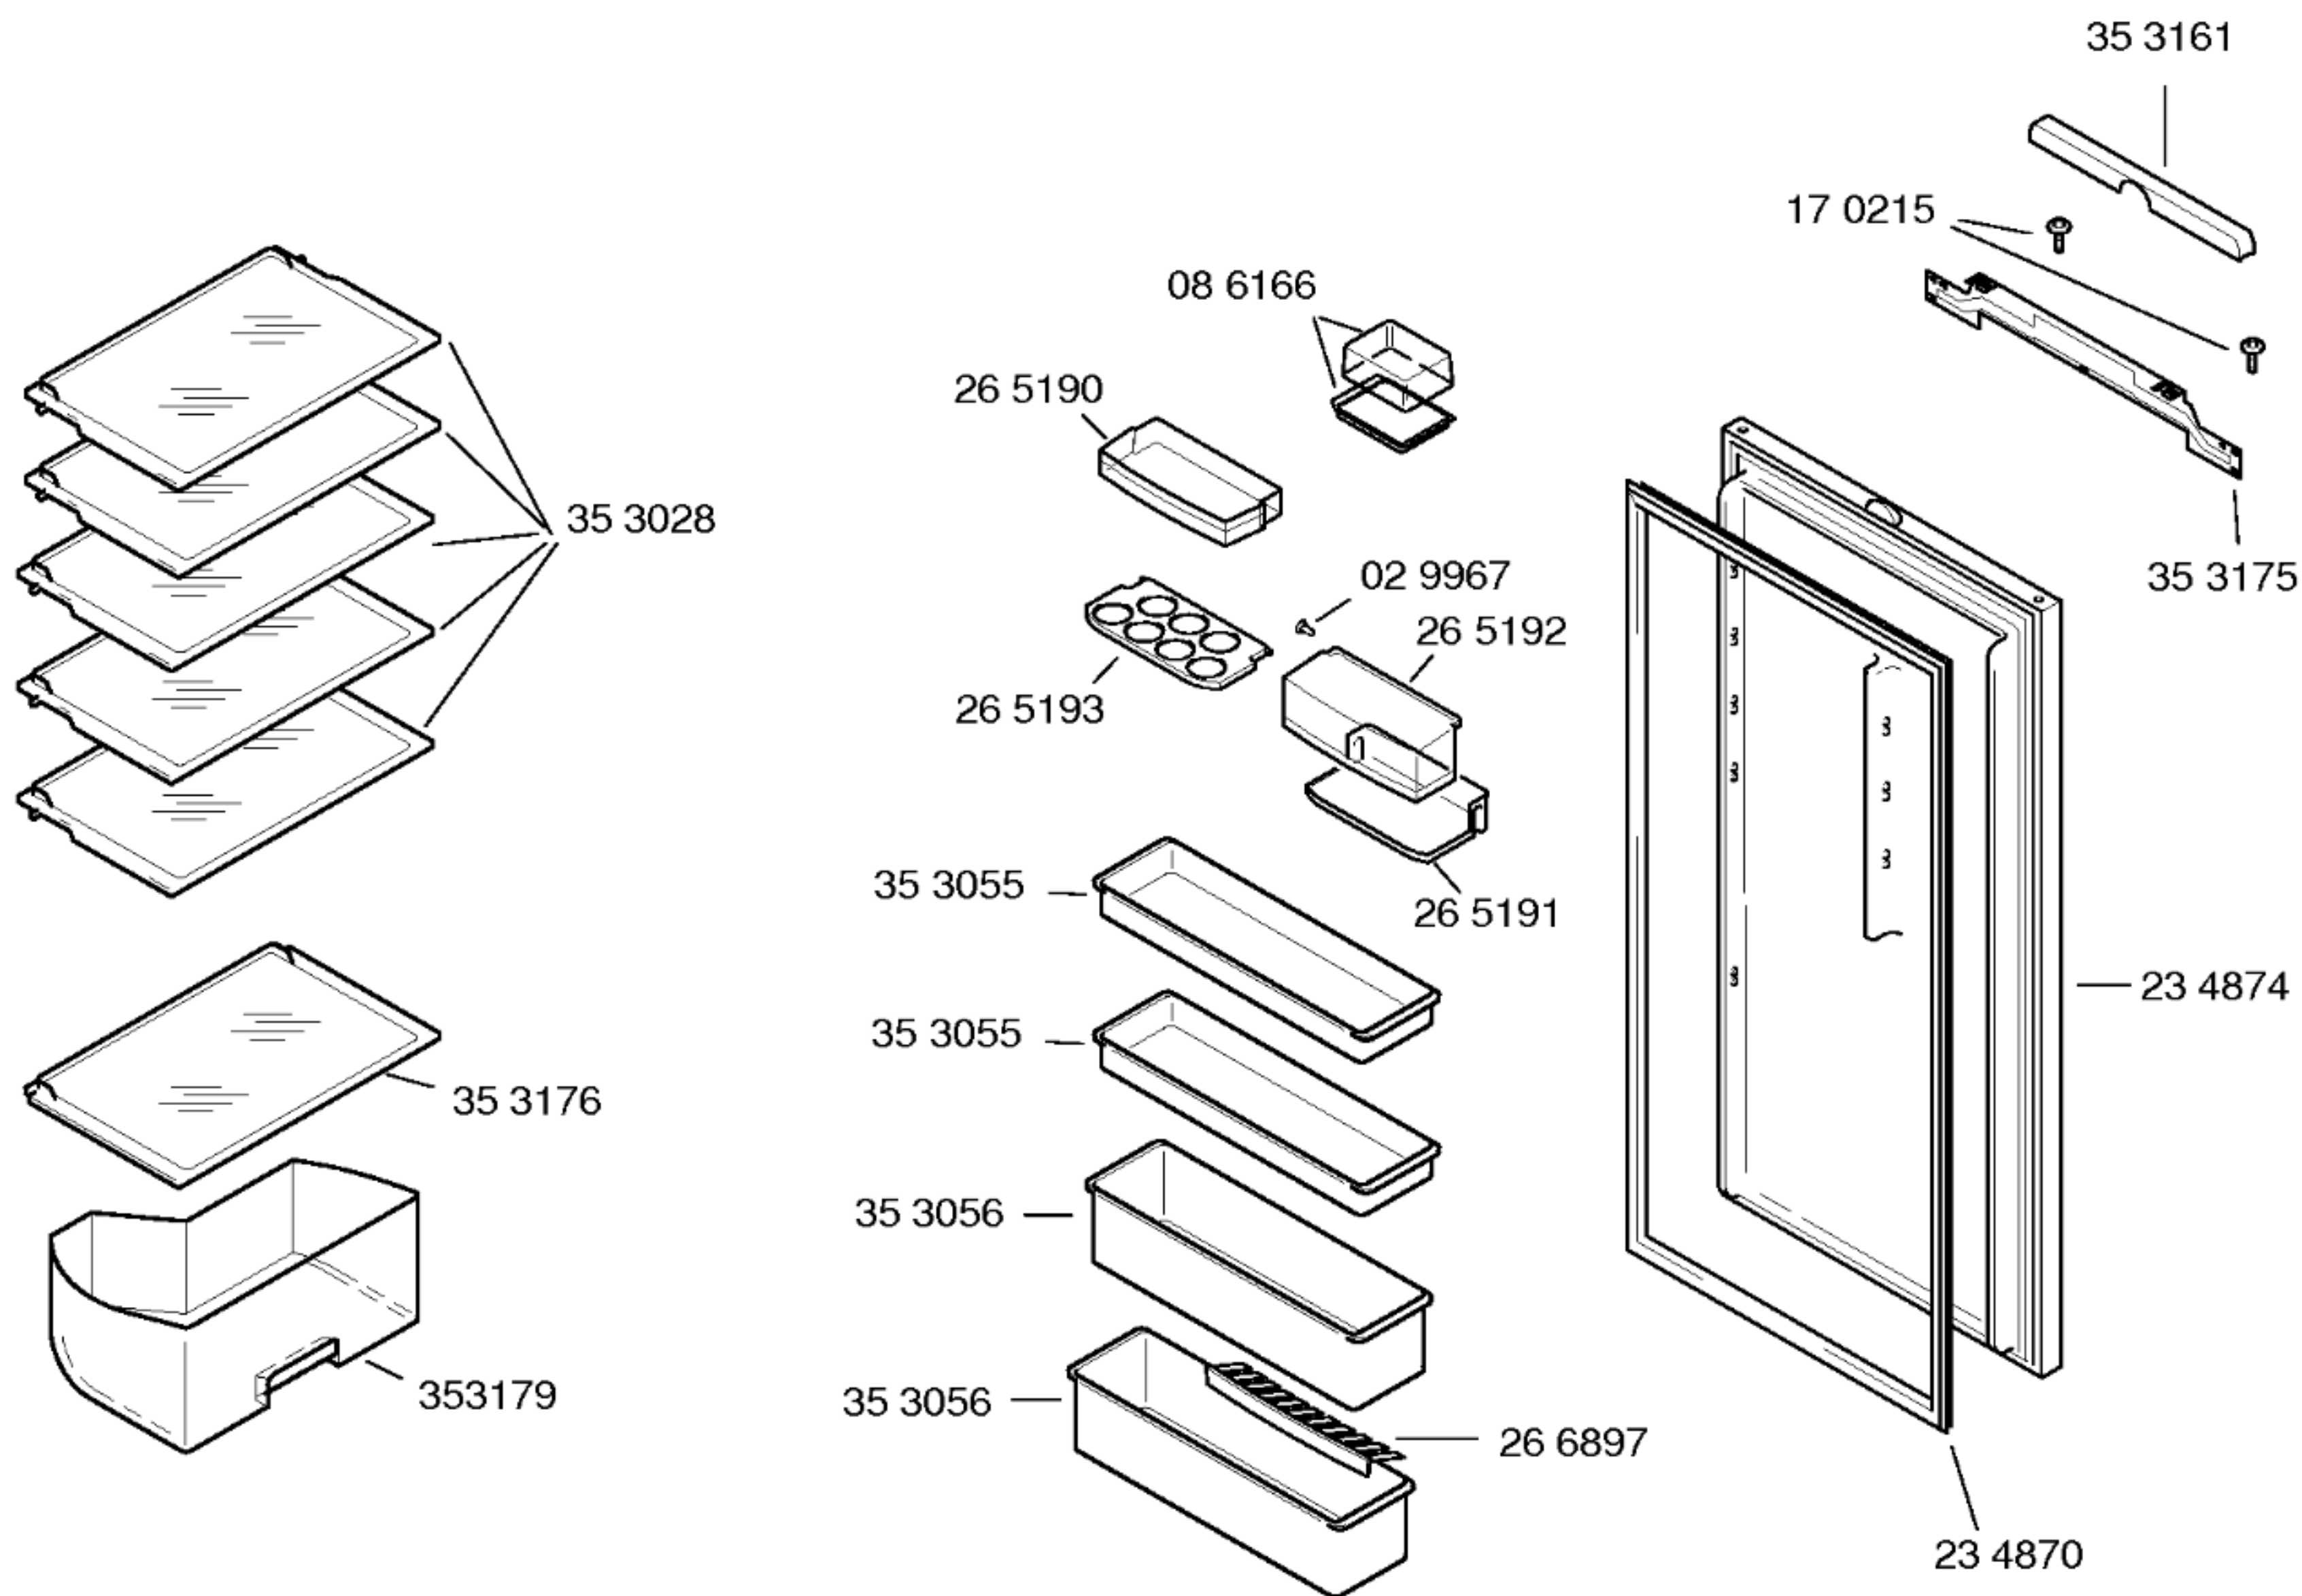

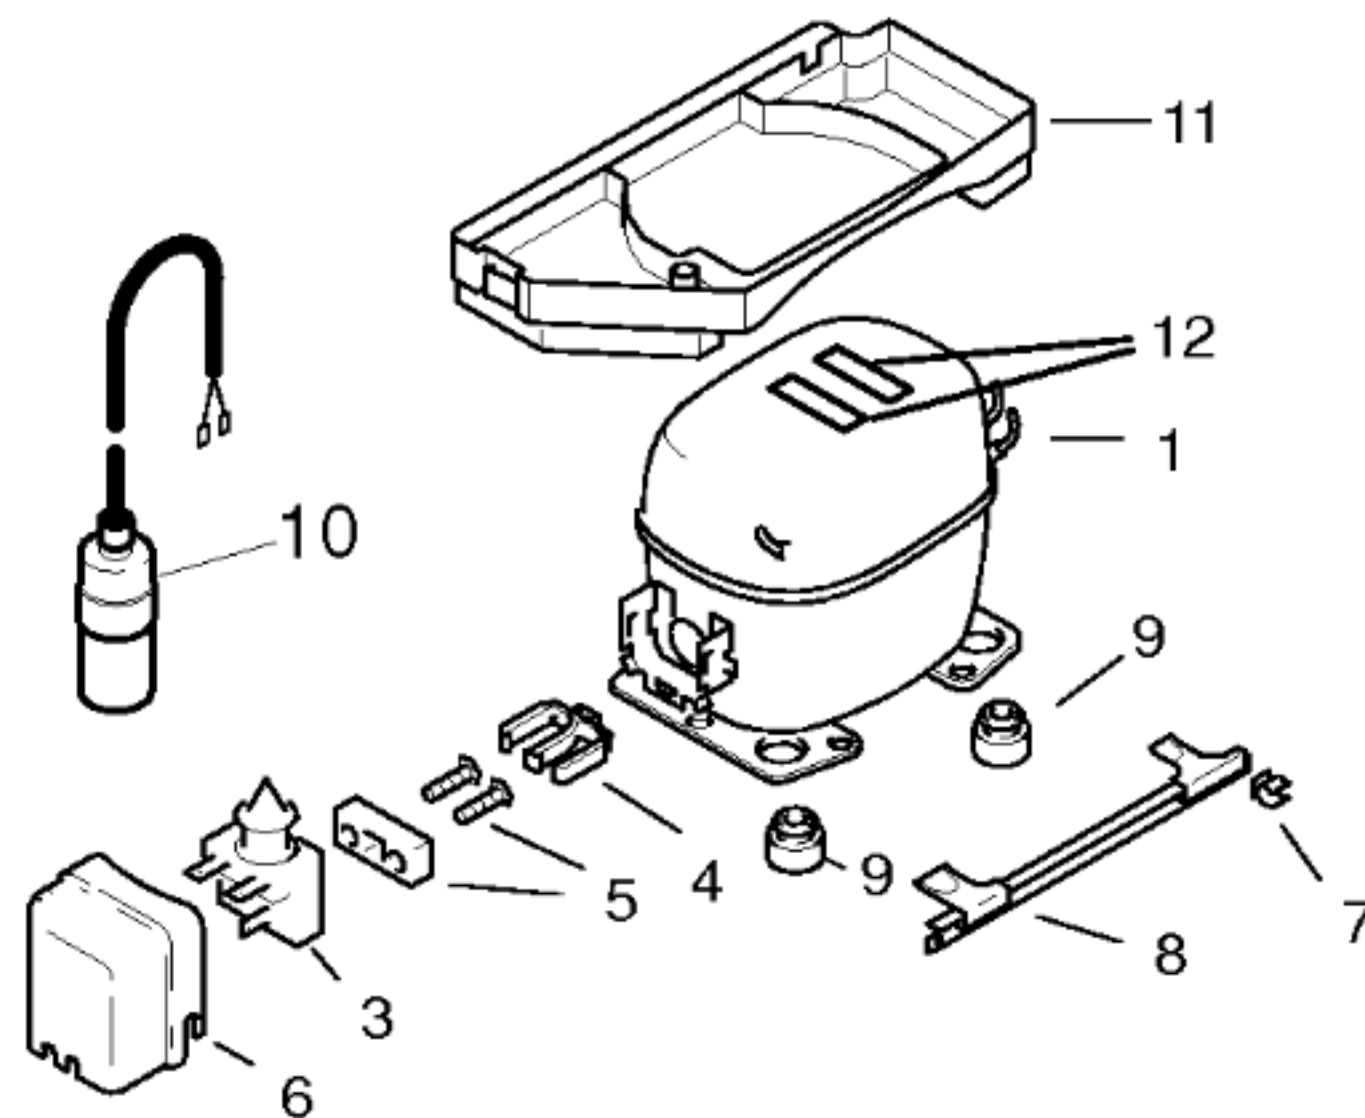

	V01	V02	
Pos.	Danfoss	Aspera	
	TLES7K	BPK1084Y	
1	14 1903	14 2101	
2			
3	15 1055	18 0819	
4	15 1053		
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	050166	
10	16 5852	16 5852	
11	354945	26 4878	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Aspera
Typ/Type		TLES7K		BPK1084Y
Förderleistung/Delivery/Débit	l/h	1198		1201
Anlaufstrom/Starting current/Cour de démarrage	A	8,8		3,6
Widerstand/Resistance/Résistance	Ha/main/prin	18,9		19,6
	Hi/aux	15,3		39,1
Temp.-Regler/Thermostat		KER		
Typ/Type		RCO		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values	ein"	+5,2	+5,2	
Valeurs de commutation	aus"	-32,0	-15,0	
Füllmenge/Fill.quantity/Charge		R600a		*
Anschlußwert/Conn.load/Puiss. connectée		W	68	79
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	W			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	W			
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	W			
Spannung/Voltage/Tension	V			

* siehe Typenschild