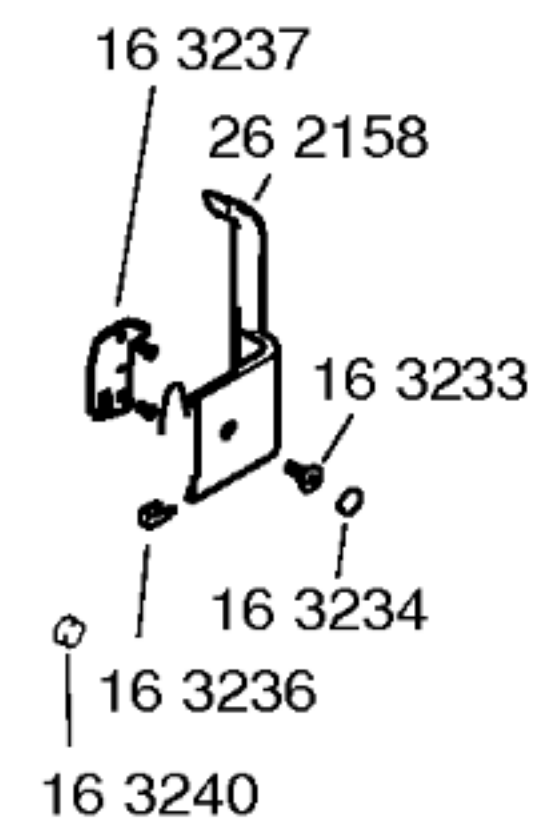
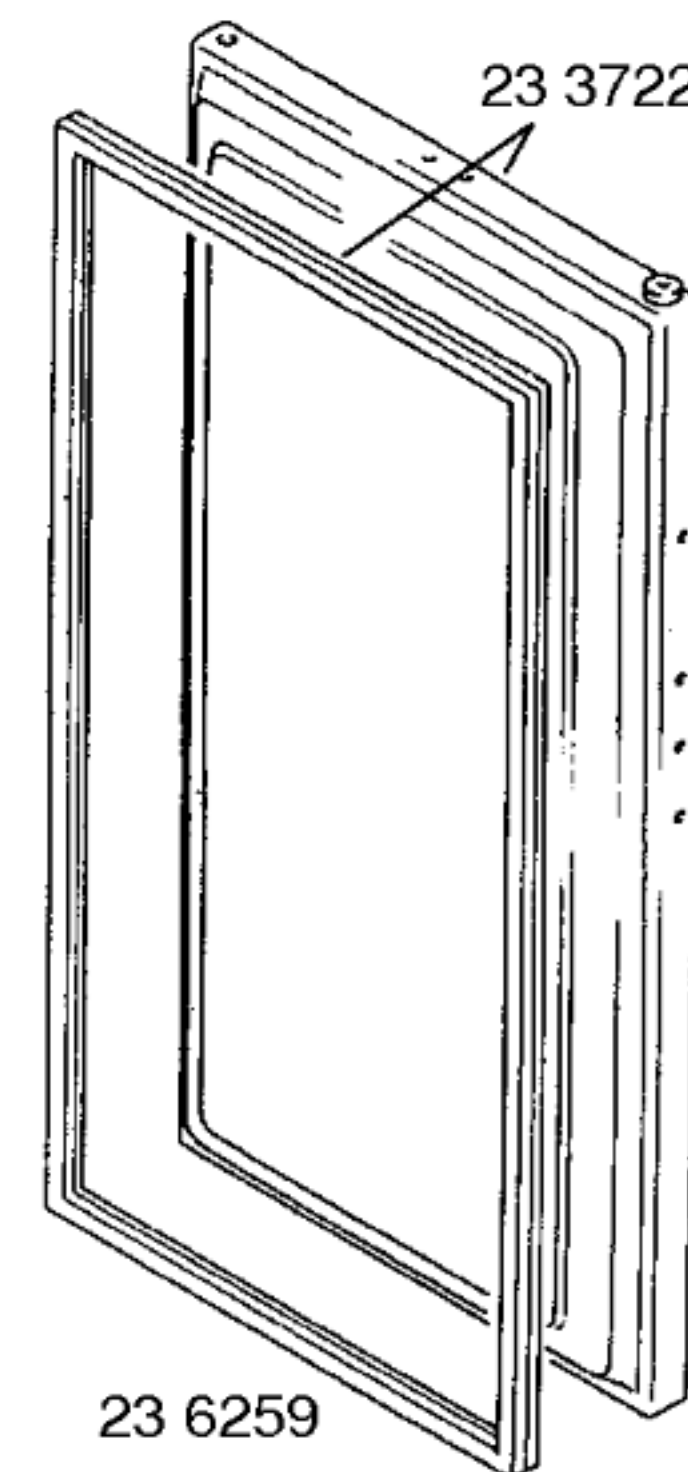
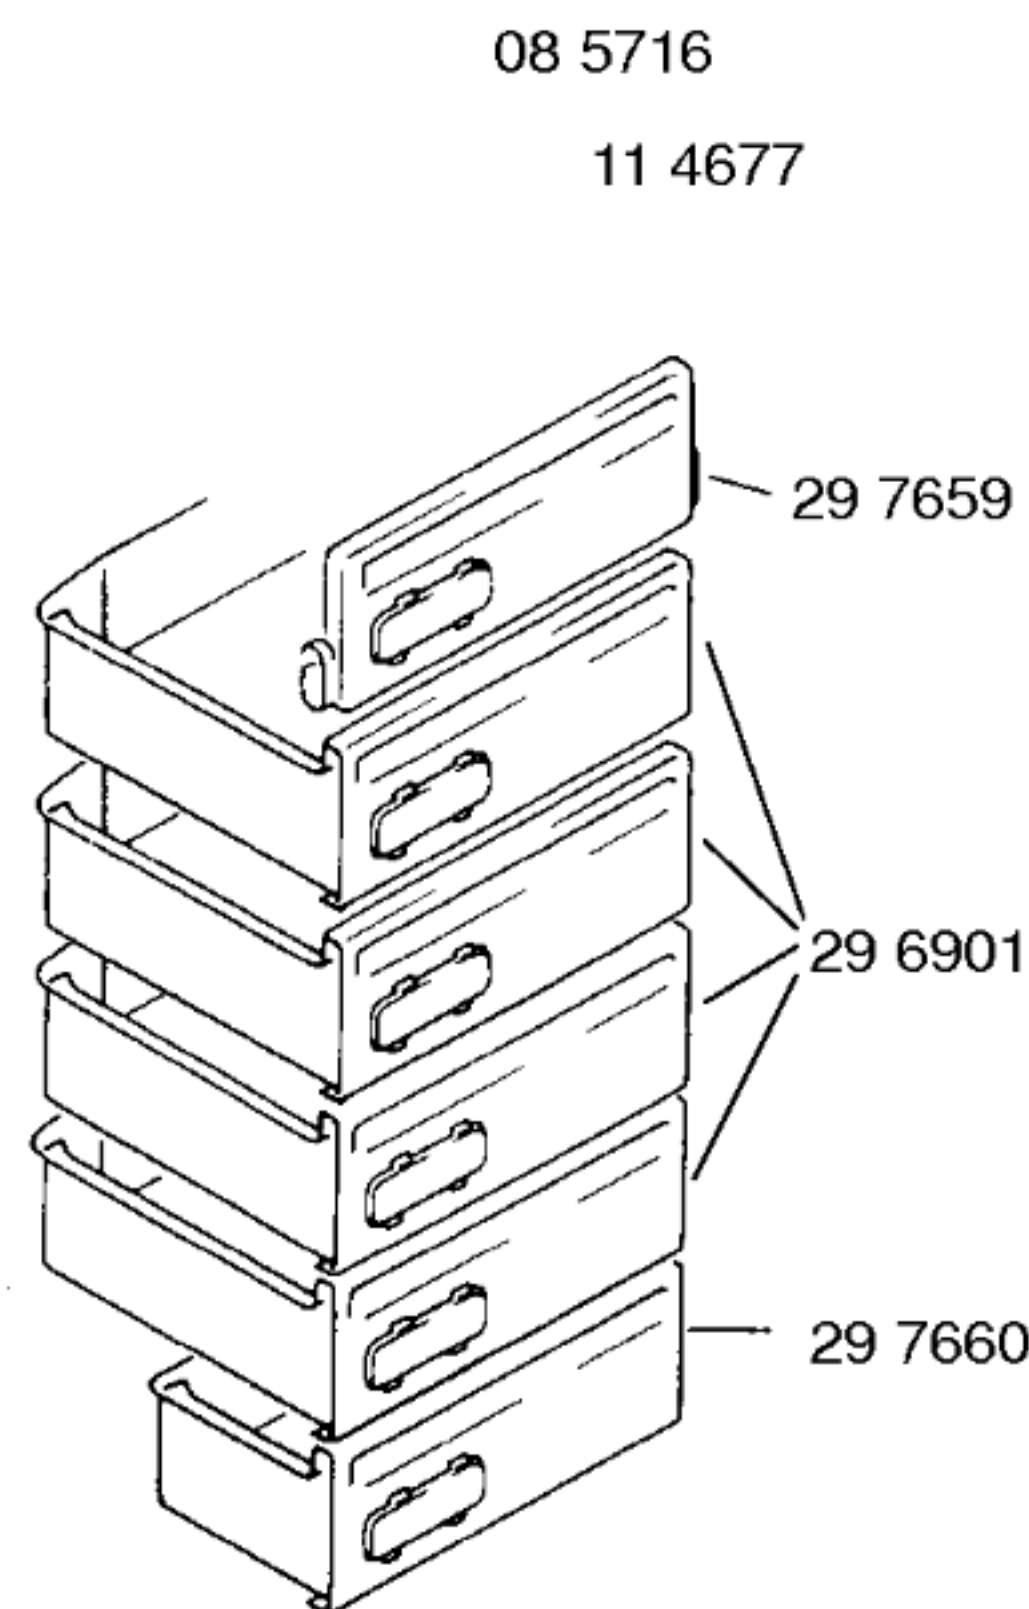
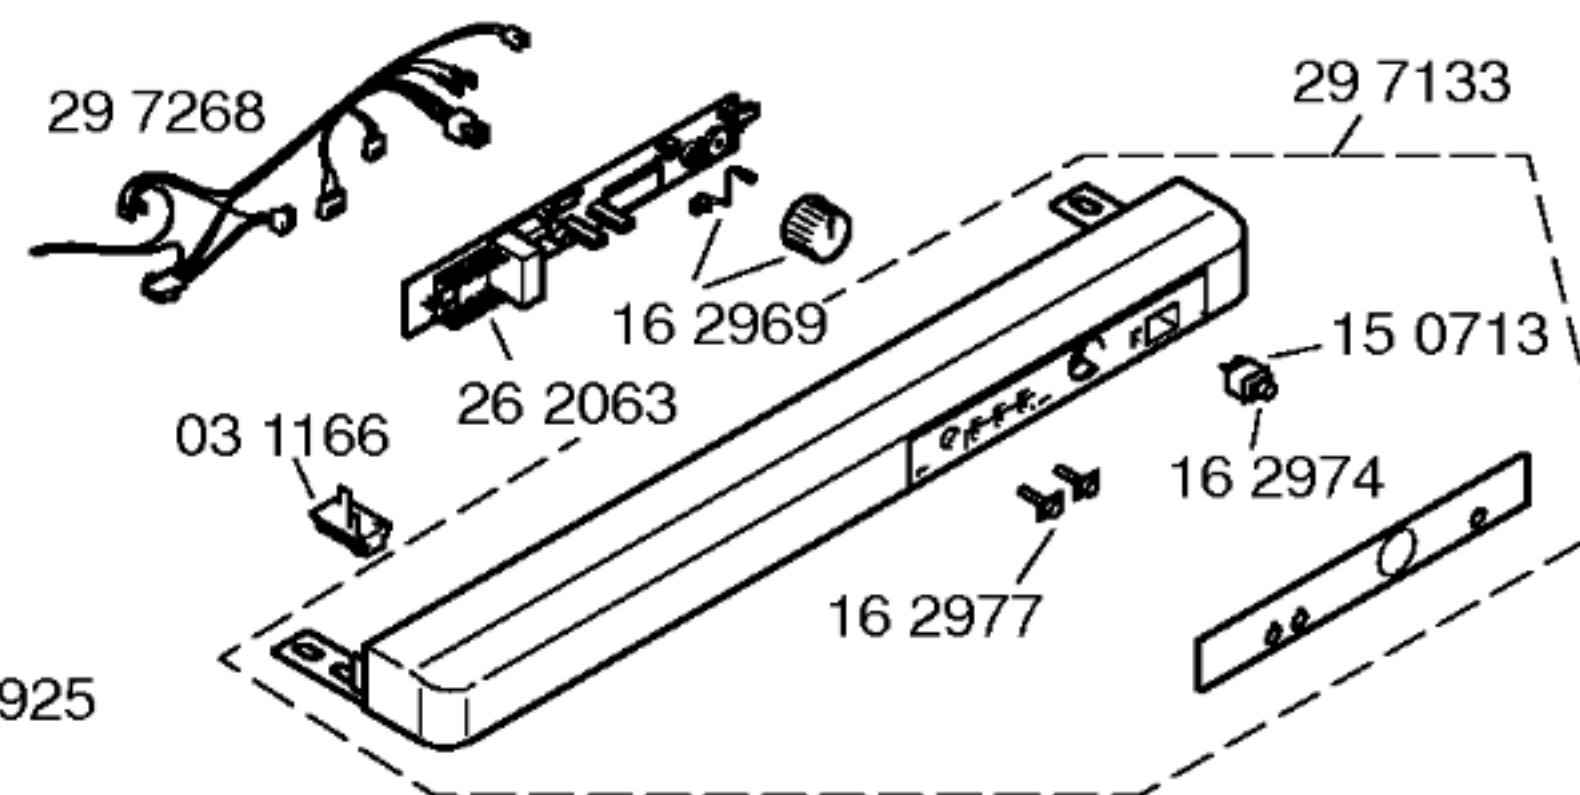
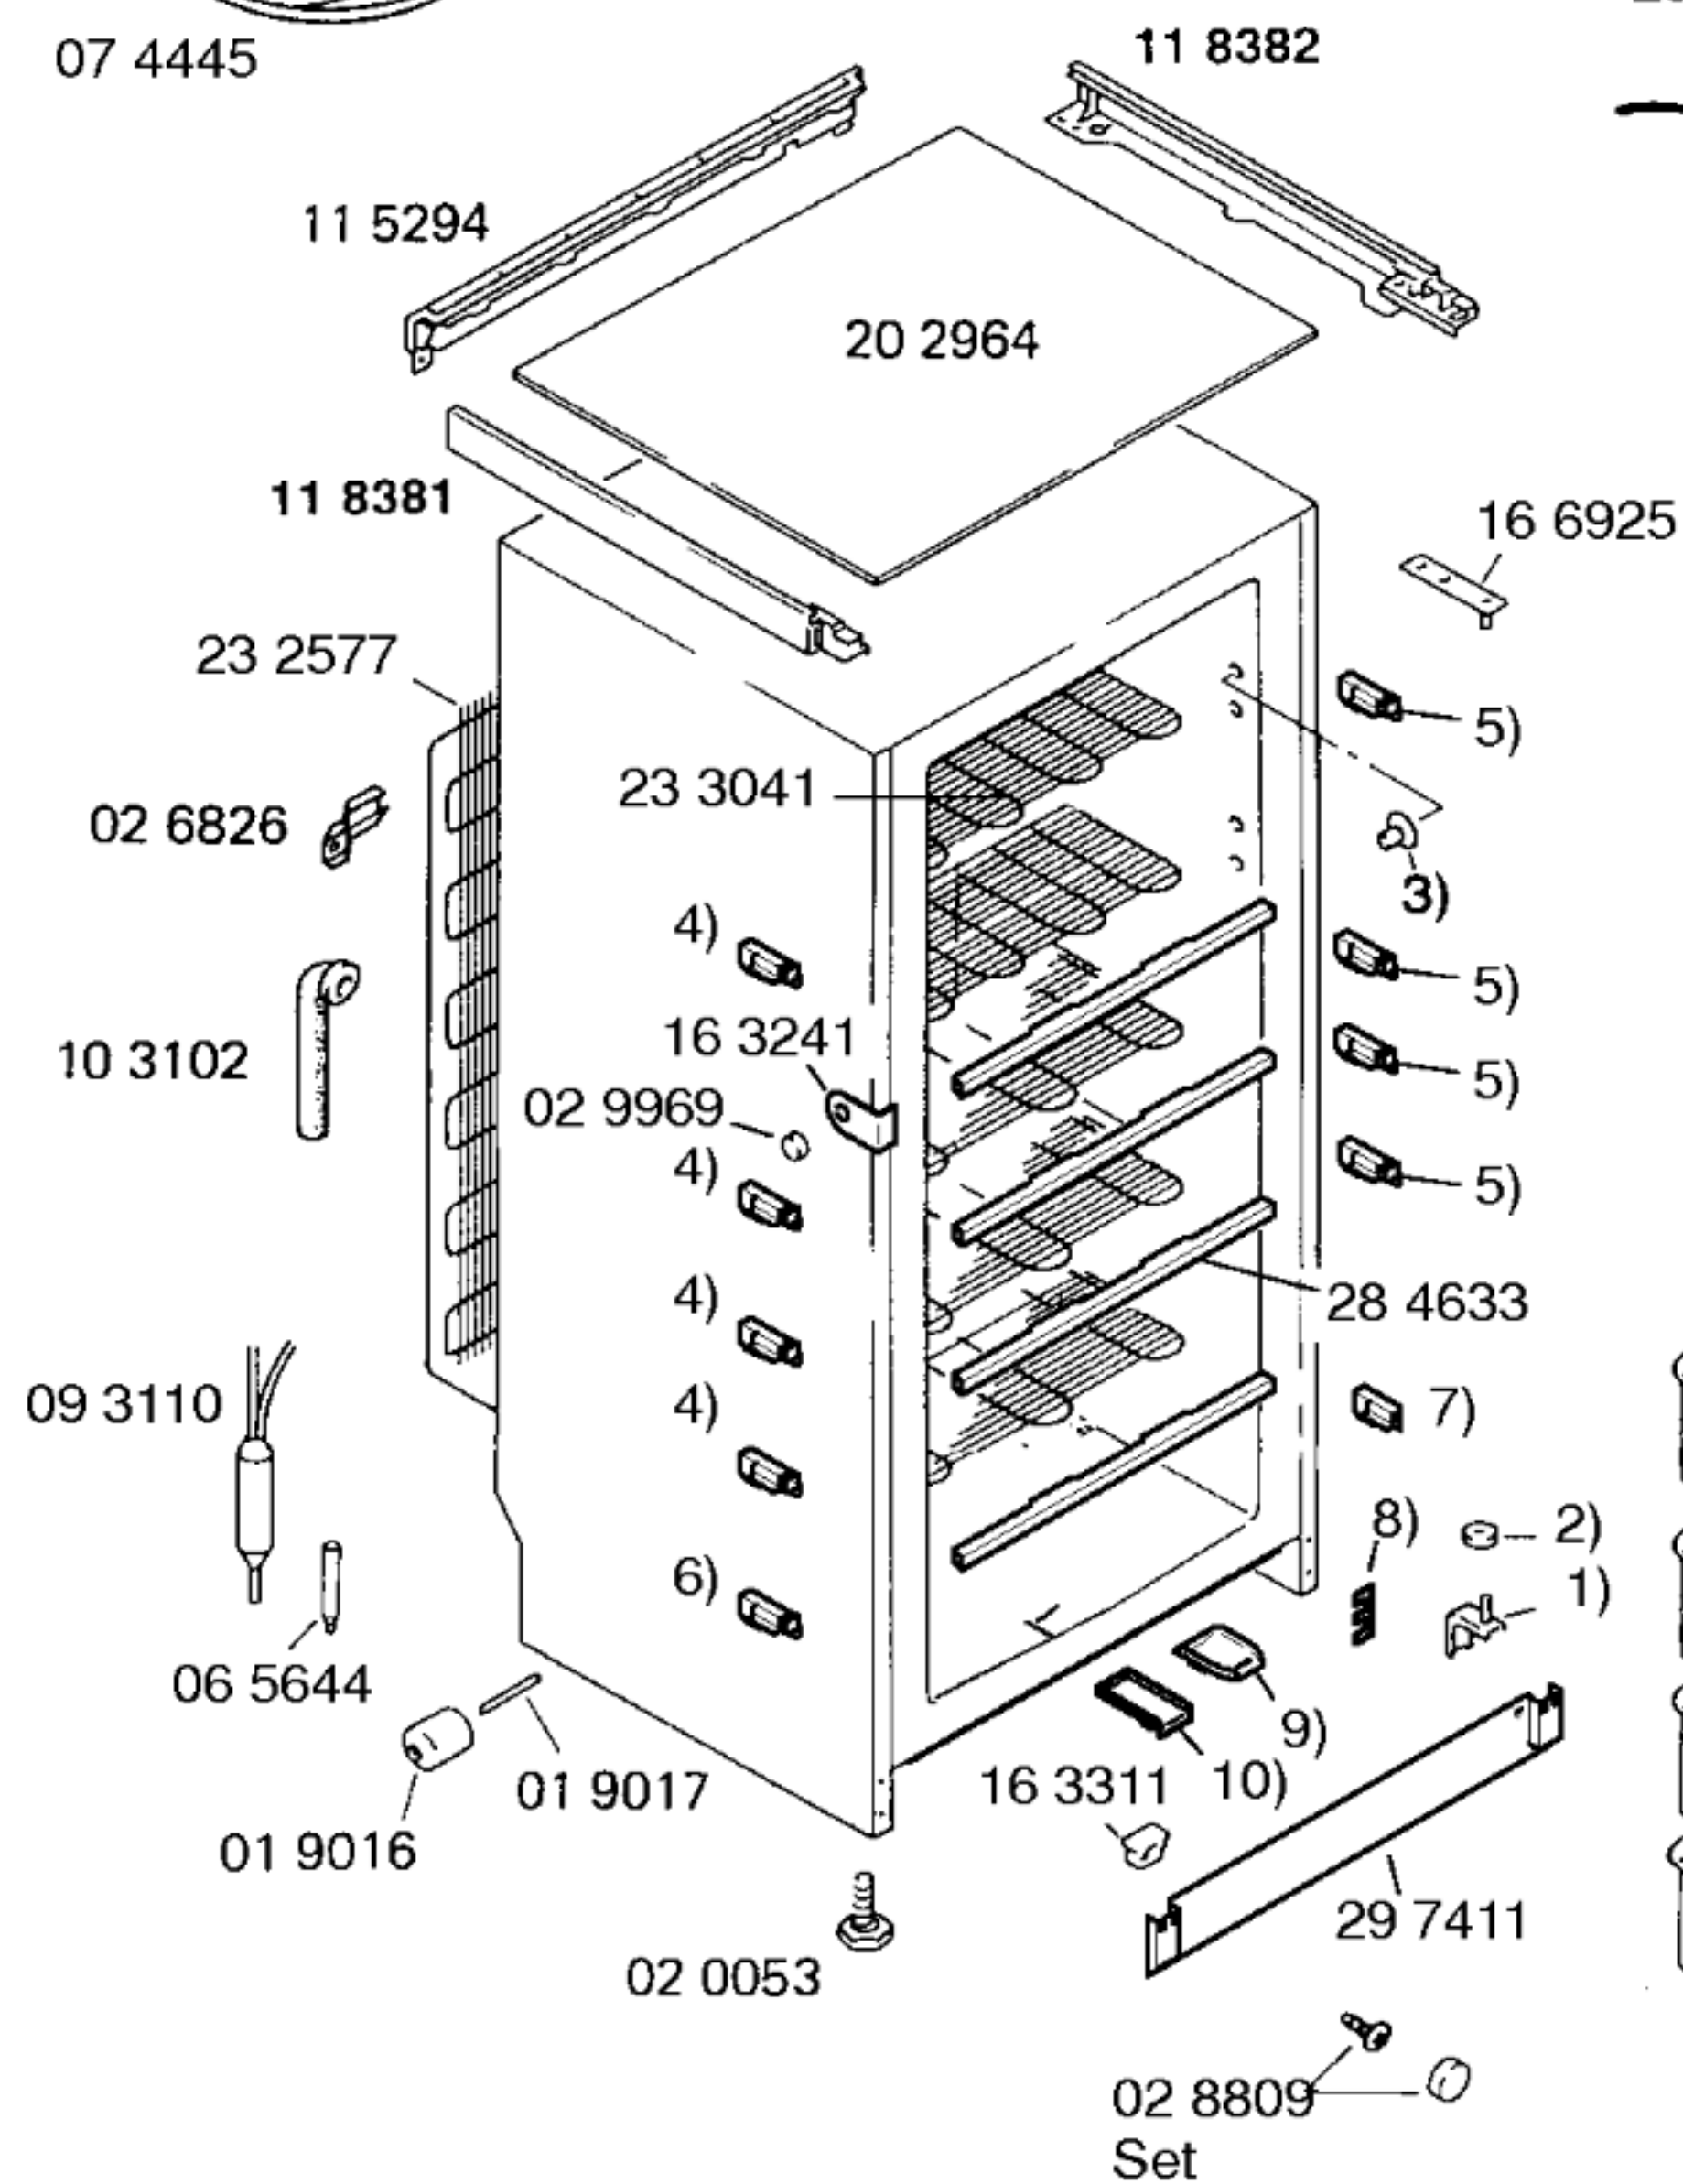


**BOSCH**


GSL2696/01-V01

KÜHL-,GEFRIERGERÄTE
Gefrierschränke, Stand

07 4445

Mat. - Nr. - Konstante
3740Gebrauchsanweisung
51 9895
(D,GB,F,I,NL,P,E)

- 1) 26 3360
- 2) 15 4364
- 3) 02 6824
- 4) 06 8297
- 5) 06 8298
- 6) 06 8299
- 7) 06 8300
- 8) 16 6926
- 9) 06 8293
- 10) 16 7339

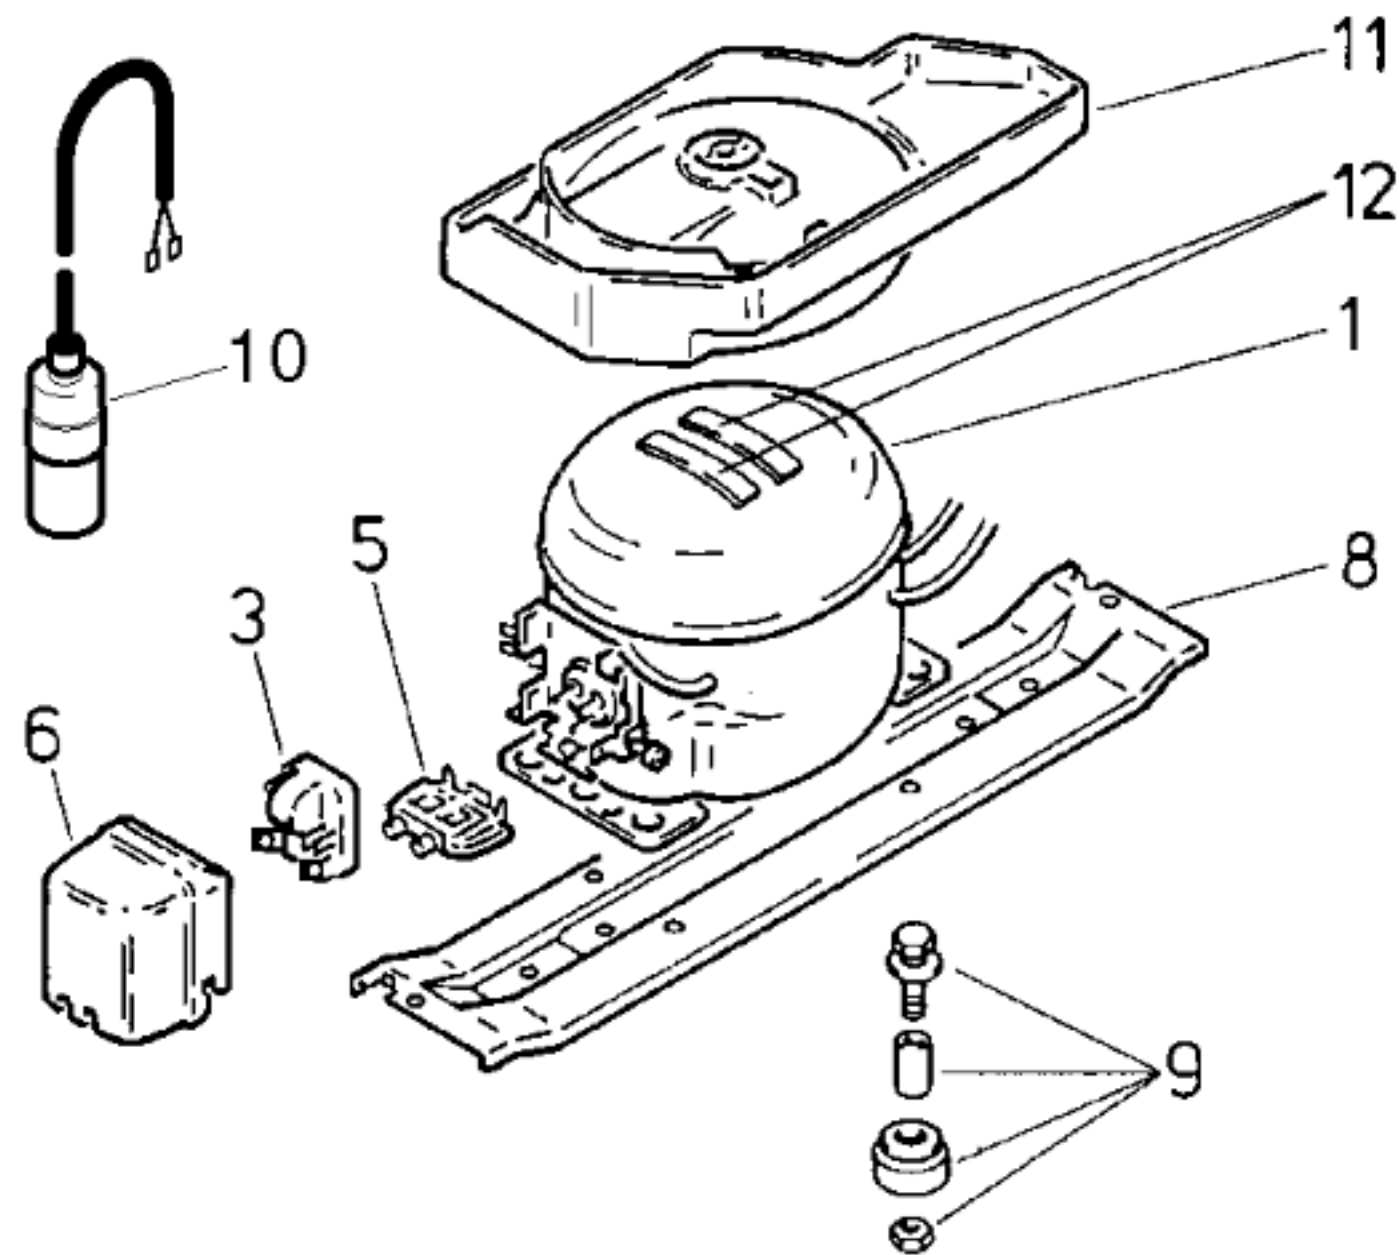Mat. – Nr. – Konstante
3740

Pos.			
	Danfoss		
	NLE 11 K		
1	14 1319		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES							
Verdichter/Compressor/Compresseur			Danfoss				
Typ/Type			NLE 11 K				
Förderleistung/Delivery/Débit			l/h	2007			
Anlaufstrom/Starting current/Cour de démarrage			A	10,7			
Widerstand/Resistance/Résistance			Ha/main/prin	Ω	12,9		
			Hi/aux	Ω	18,0		
Temp.–Regler/Thermostat			Elektronisch				
Typ/Type			EIN AUS				
Regelstellung/Position							
Schaltwerte/Switching values			"warm"	-14 -15			
Valeurs de commutation			"kalt"	-22 -23			
			"alarm"	-10 -14			
Füllmenge/Fill.quantity/Charge			R600a	siehe Typenschild			
Anschlußwert/Conn.load/Puiss. connectée			W	120			
Heizung/Heater/Chauffage							
Widerstand/Resistance/Résistance			Ω				
Leistung/Power/Puissance			W				
Ventilator/Blower/Ventilateur							
Widerstand/Resistance/Résistance			Ω				
Widerstand NTC–Fühler			°C	kΩ	°C	kΩ	
			-1	17,3	-15	36,5	
			-9	26,2	-16	38,8	
			-14	34,5	-19	45,9	
Magnetventil/Magnetic valve/Electrovanne							
Widerstand/Resistance/Résistance			Ω				
Spannung/Voltage/Tension			V				