


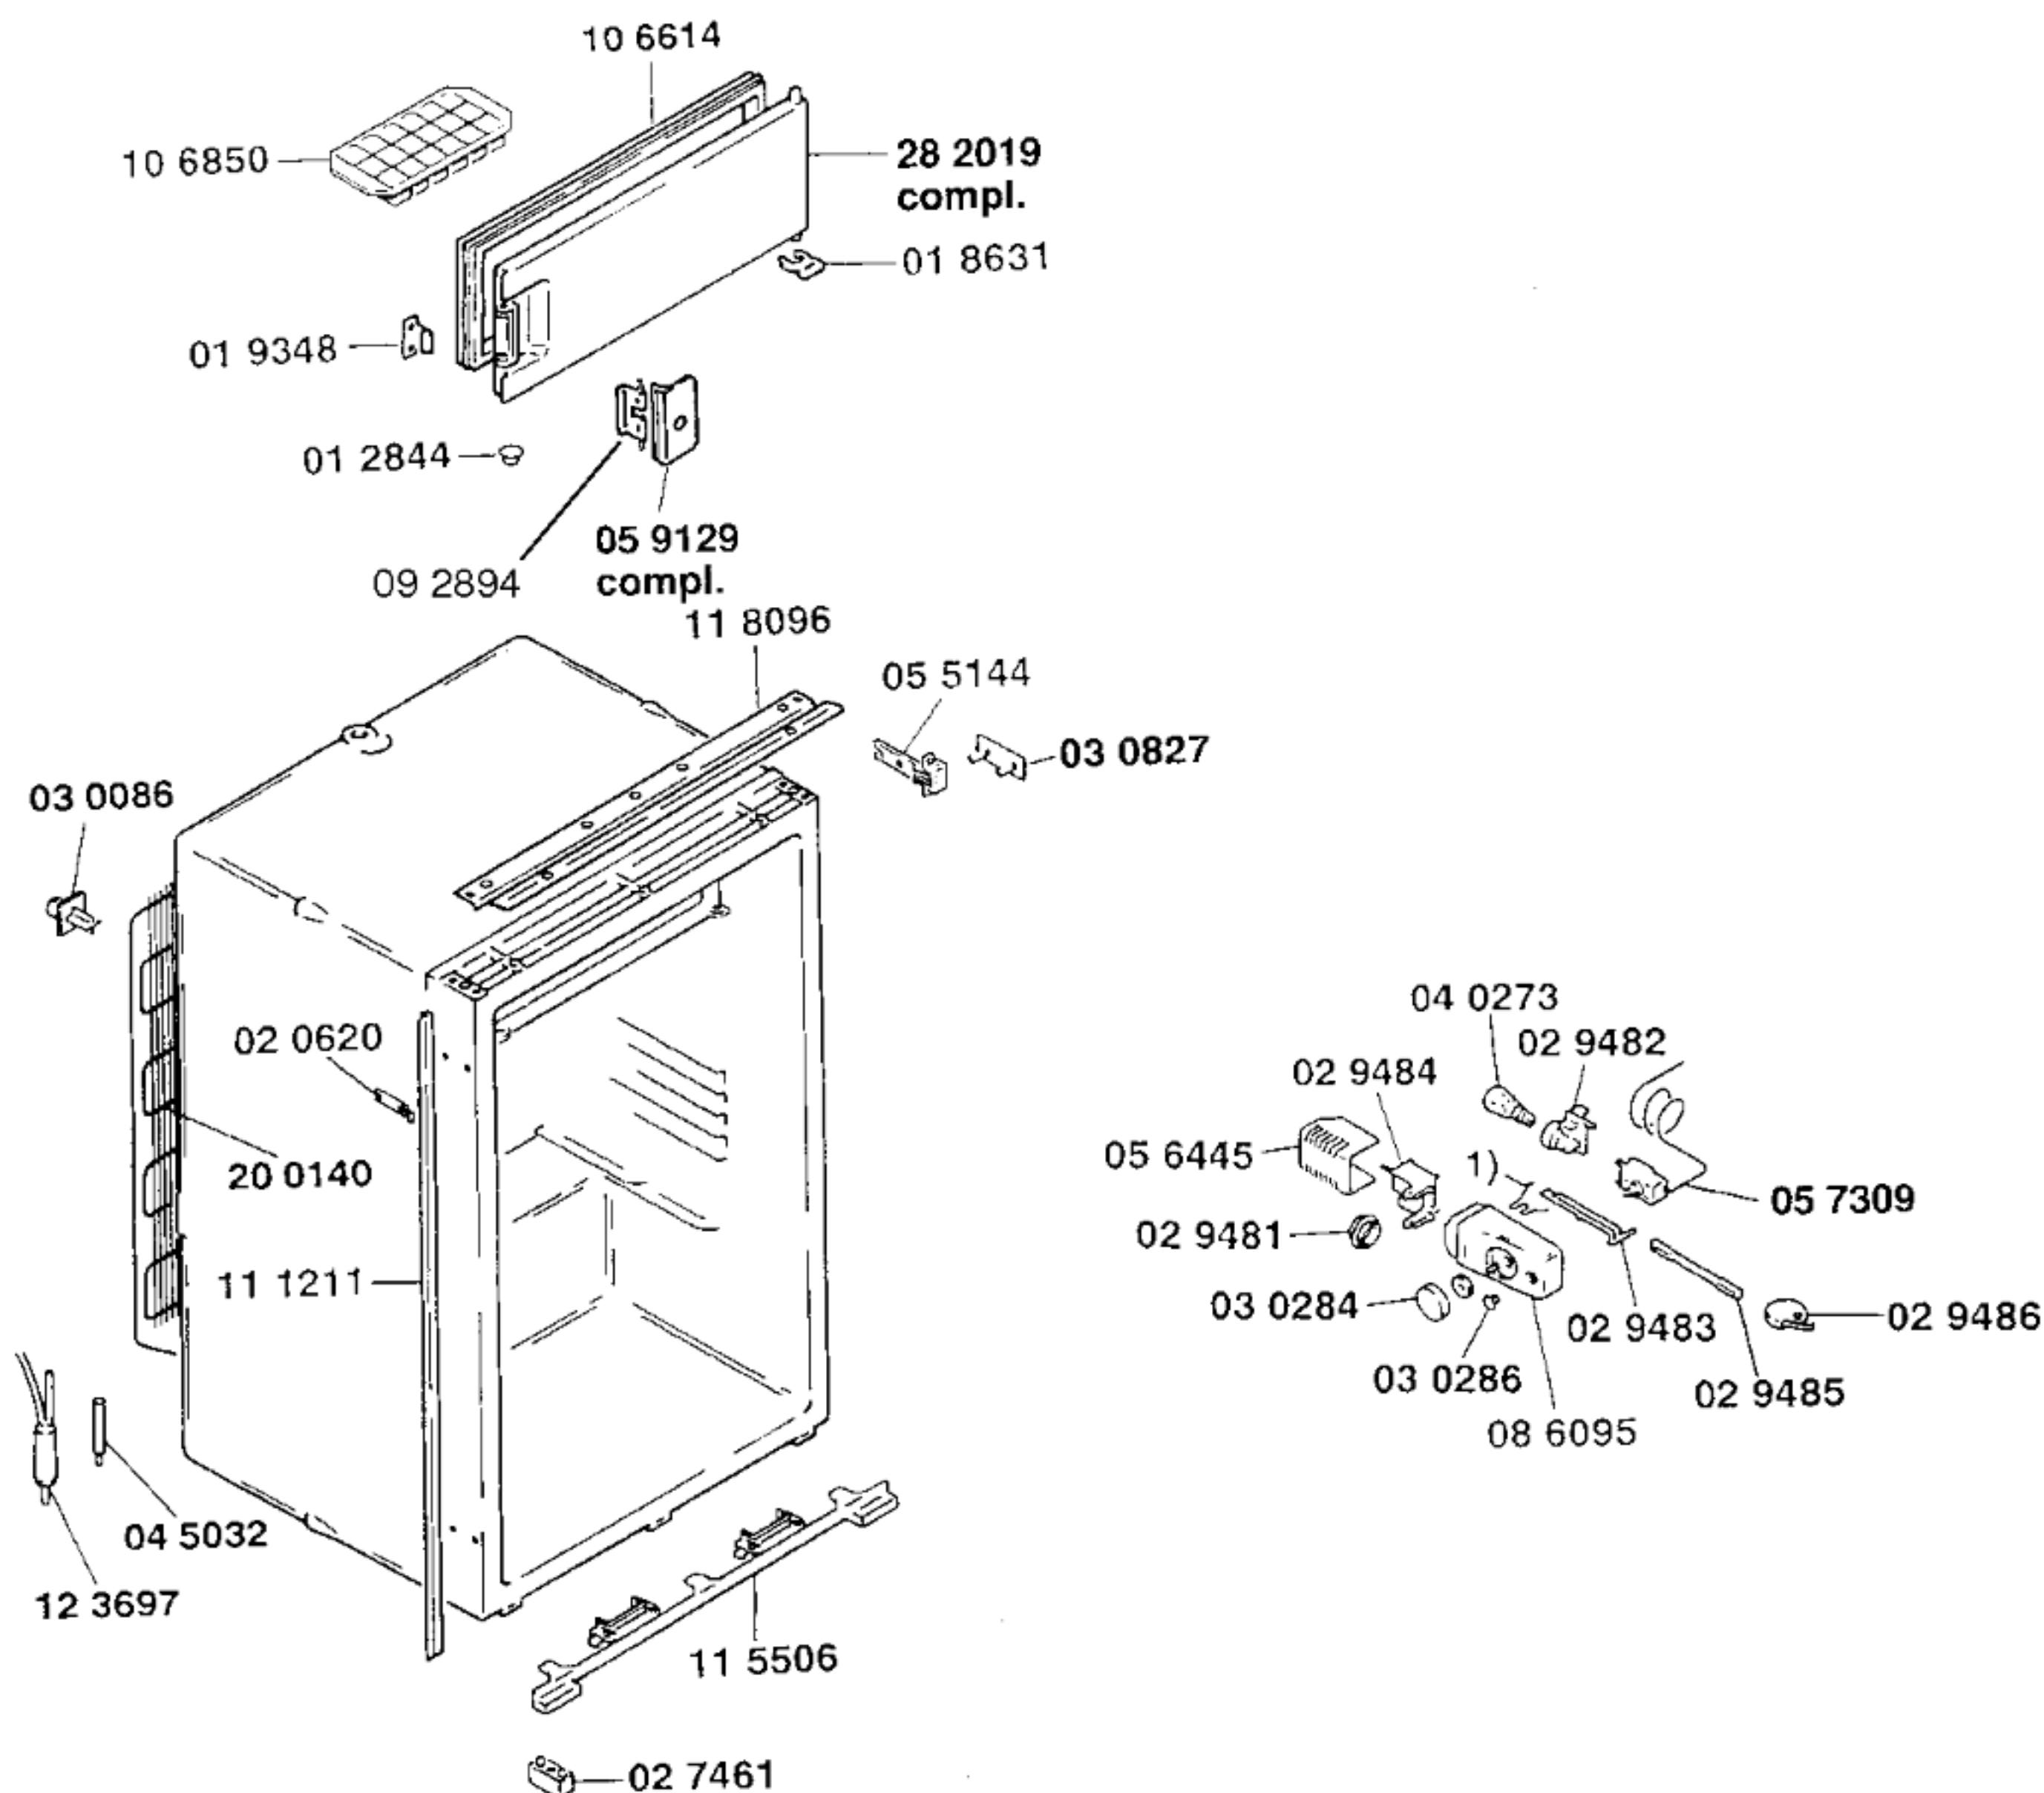

51 3746
Gebrauchsanweisung
(D,GB,F,I,NL)

51 4779
Montageanleitung
(D,GB,F,I,NL,DK,N,S,SF,
E,P)

08 4136
Schraubensatz


1) 02 9480


Zubehör:

Dekorrahmen
Z4130B0, braun
Z4130W0, weiss

Ausgleichs-
blenden
Alu:
Z4210A0, 37mm
Z4220A0, 56mm

braun:
Z4210B0, 37mm
Z4220B0, 56mm

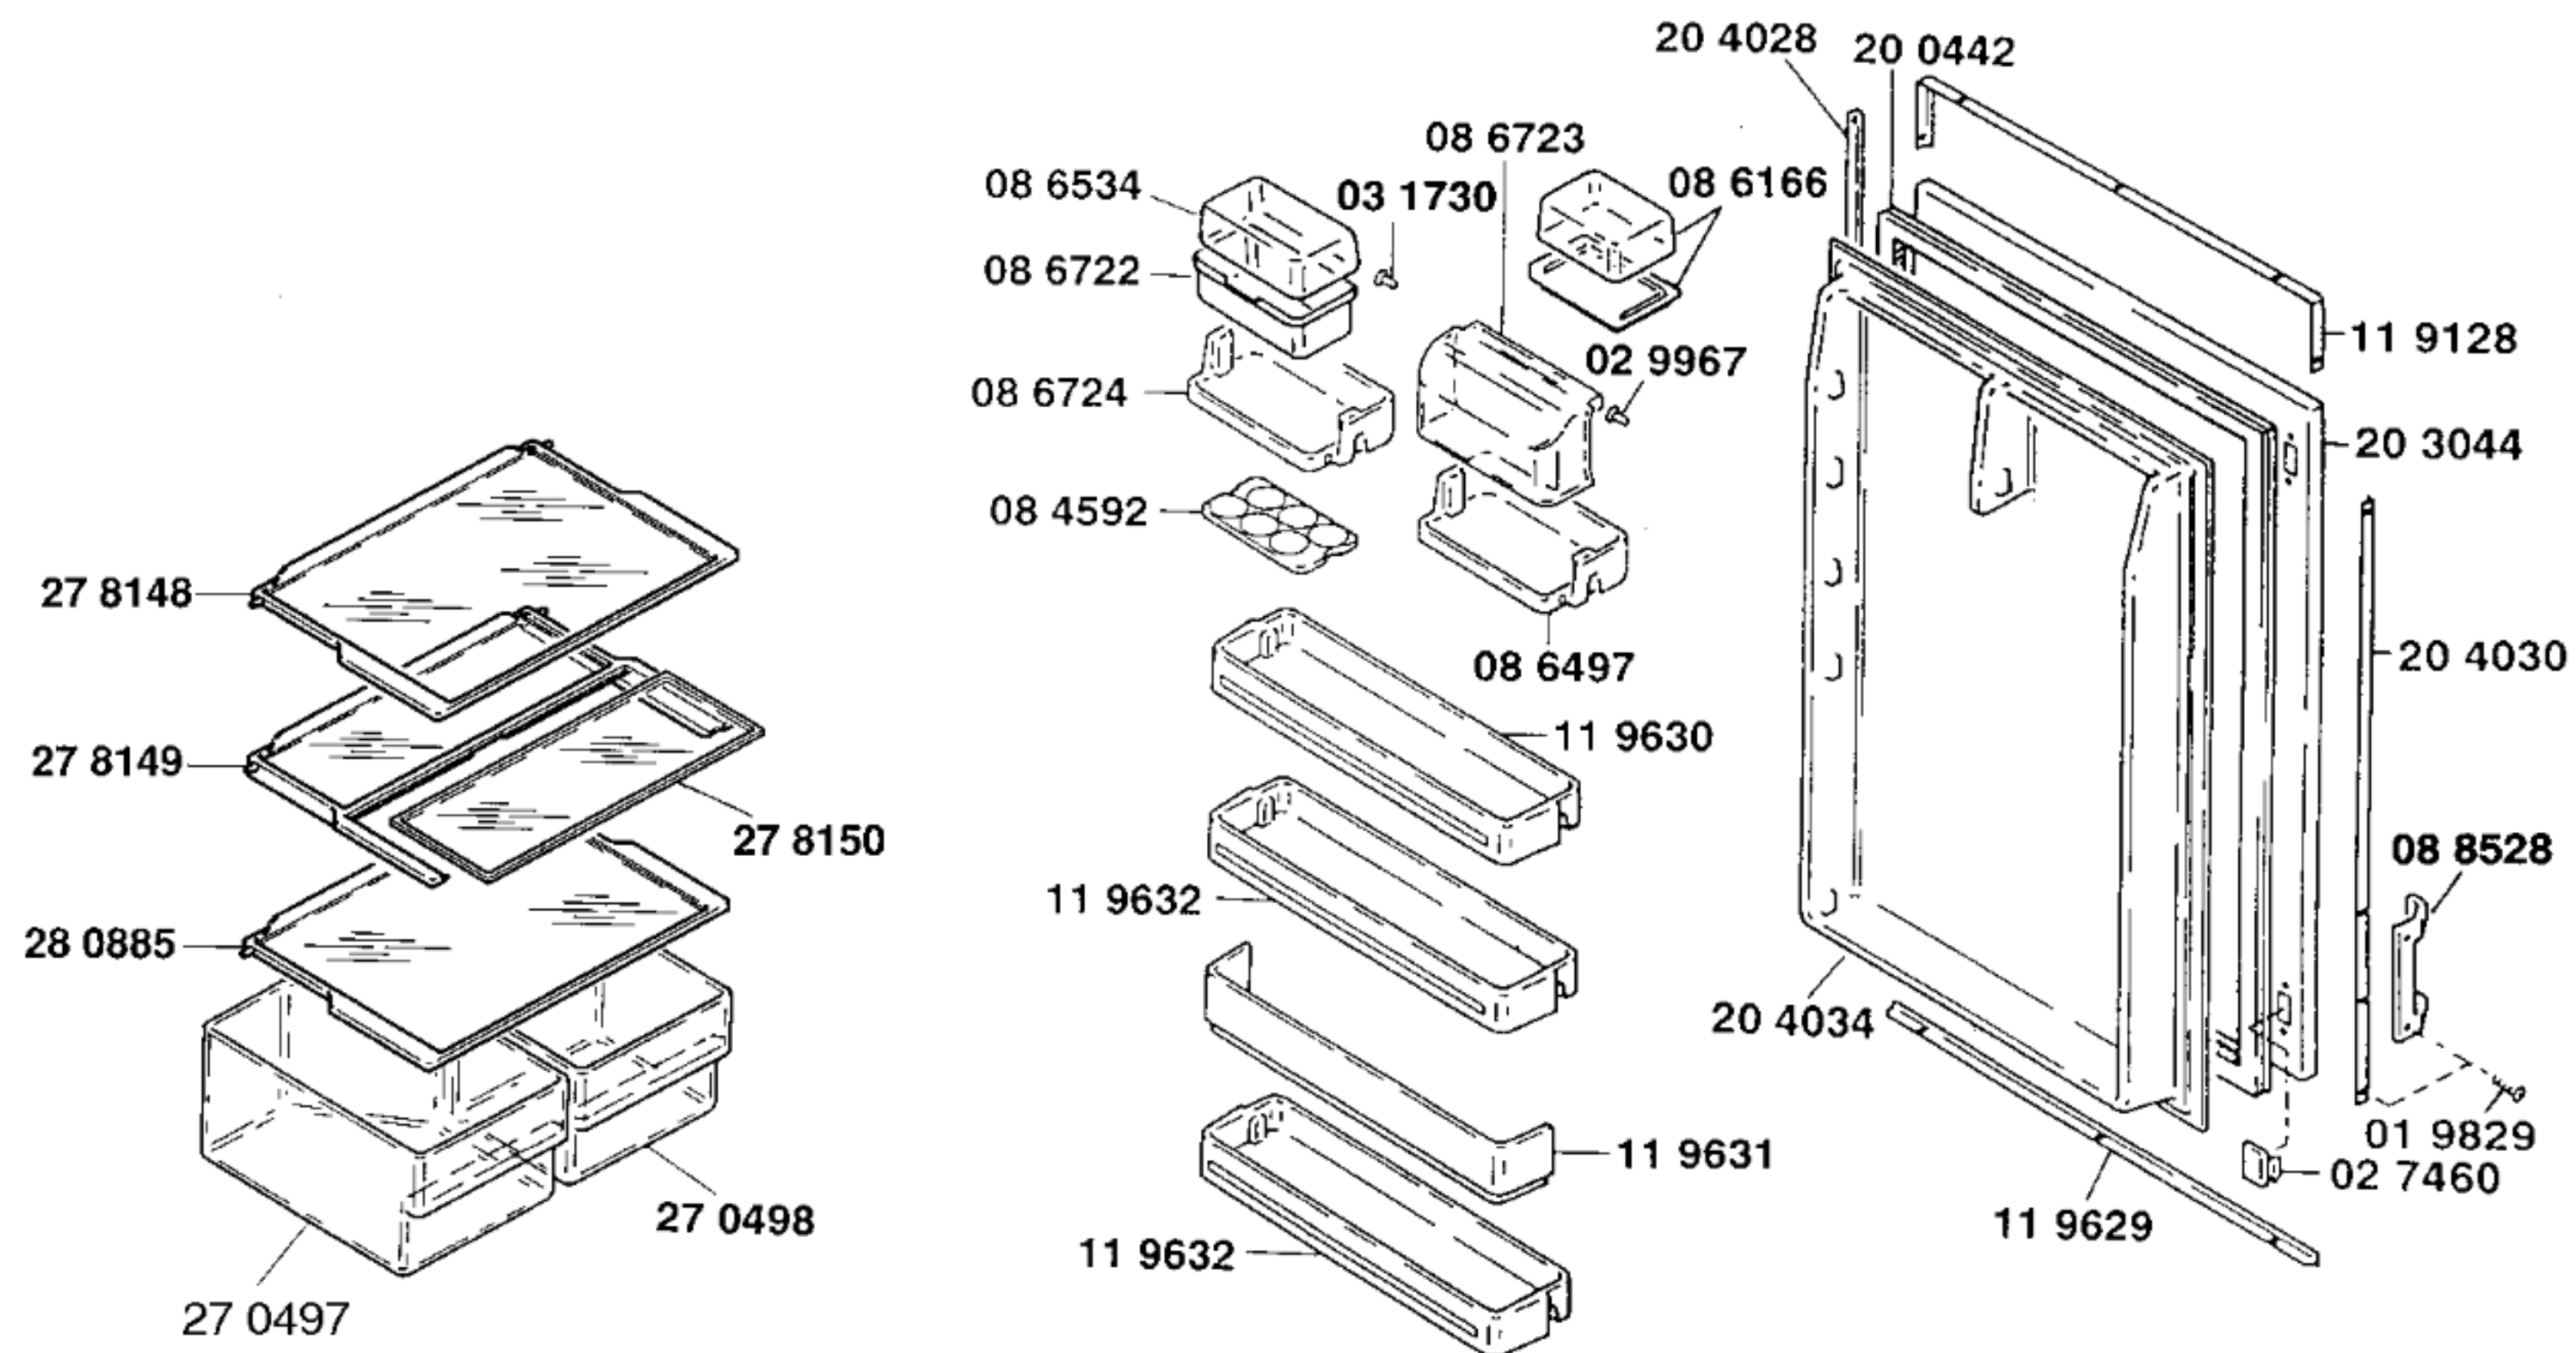

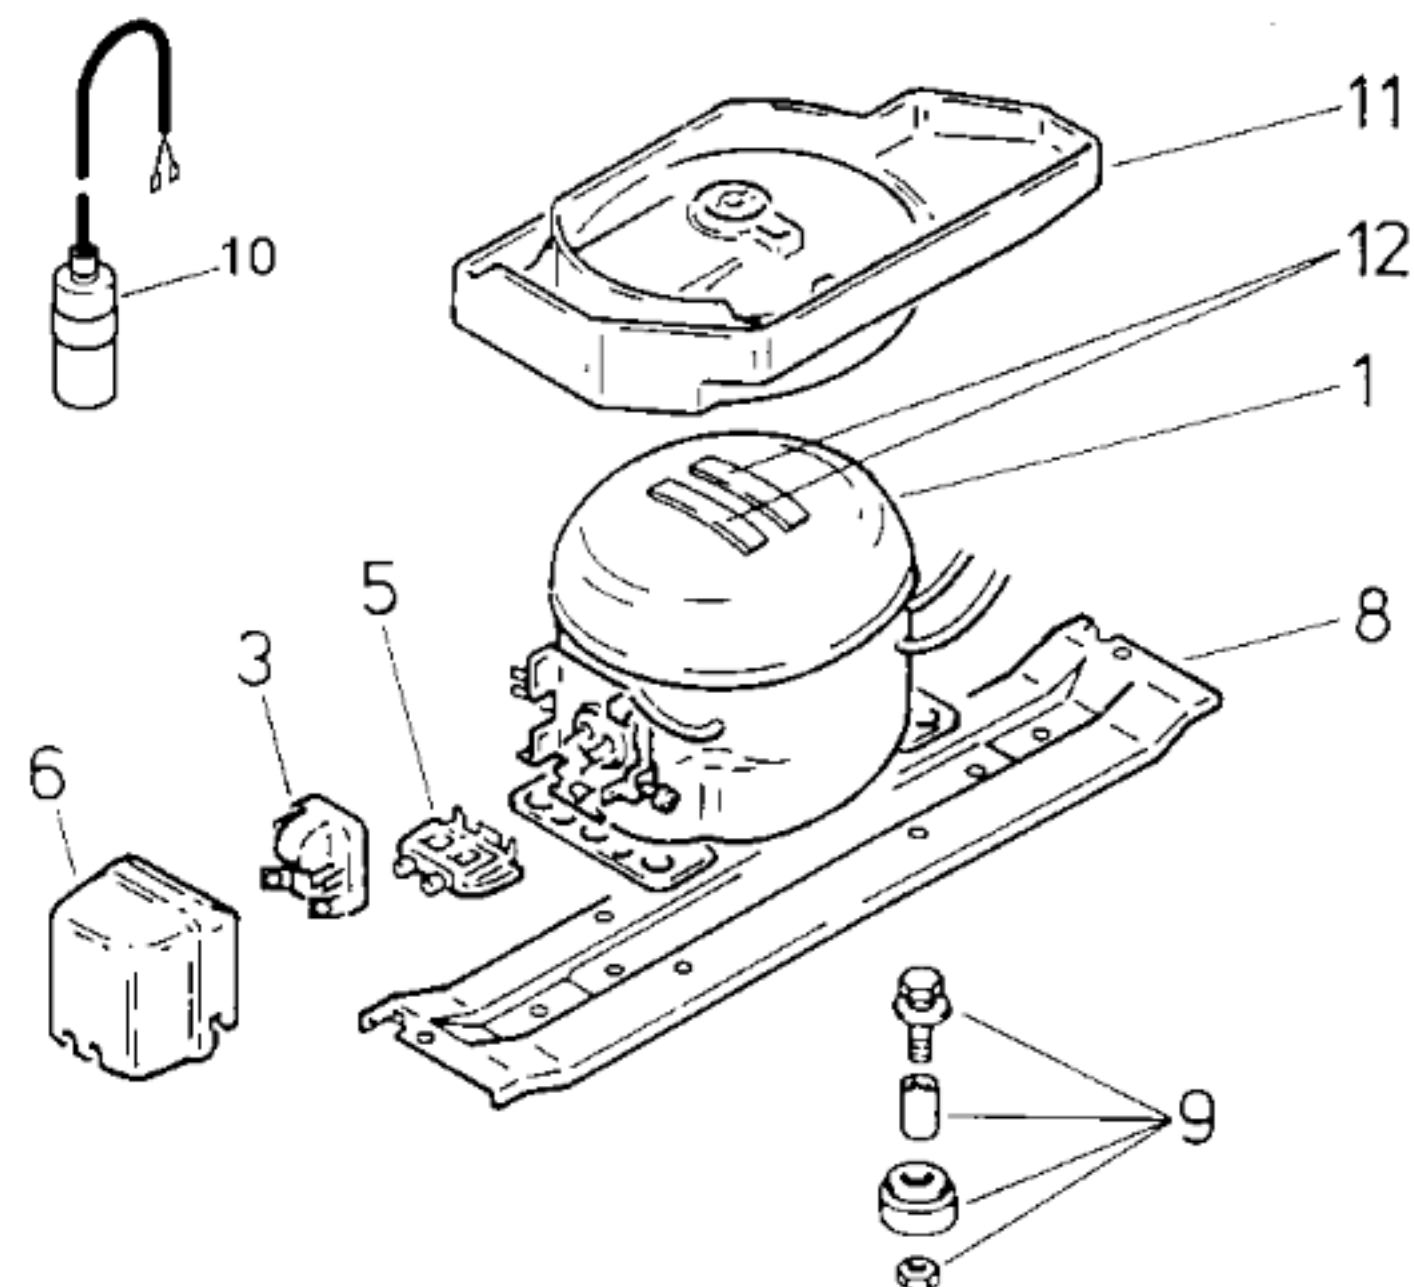

Pos.	Danfoss		
	TL 4 A		
1	13 1064		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 8207		
9	05 0166		
10	05 9128		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A		
Förderleistung/Delivery/Débit	l/h	695		
Anlaufstrom/Starting current/Cour. de démarrage	A	8,3		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	23,4		
	Hi/aux Ω	15,5		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 F1		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+ 5	+ 5	
Valeurs de commutation	„aus“	- 27	- 12	
	(„abtauen“ od.)	„alarm“		
Fullmenge/Fill.quantity/Charge	R12	g	80	
Anschlußwert/Conn.load/Puiss. connectée	W	110		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			