

**BOSCH**

GSD 3014/01-EU1
GSD 3014CH/01-CH1
GSD 3014FF/01-F1

GSD 3014/02-EU2
GSD 3014FF/02-F2


KÜHL-,GEFRIERGERÄTE
Gefrierschränke, Stand

Ident – Nummern – Konstante
3740

Gebrauchsanweisungen

51 6980
(D,GB,F,I,NL,P,E)
51 6981
(S,DK,SF,N)

- | | |
|----|---------|
| 1) | 02 6816 |
| 2) | 026819 |
| 3) | 02 7786 |
| 4) | 02 6824 |
| 5) | 06 8297 |
| 6) | 06 8299 |
| 7) | 06 8298 |
| 8) | 06 8300 |
| 9) | 06 8499 |

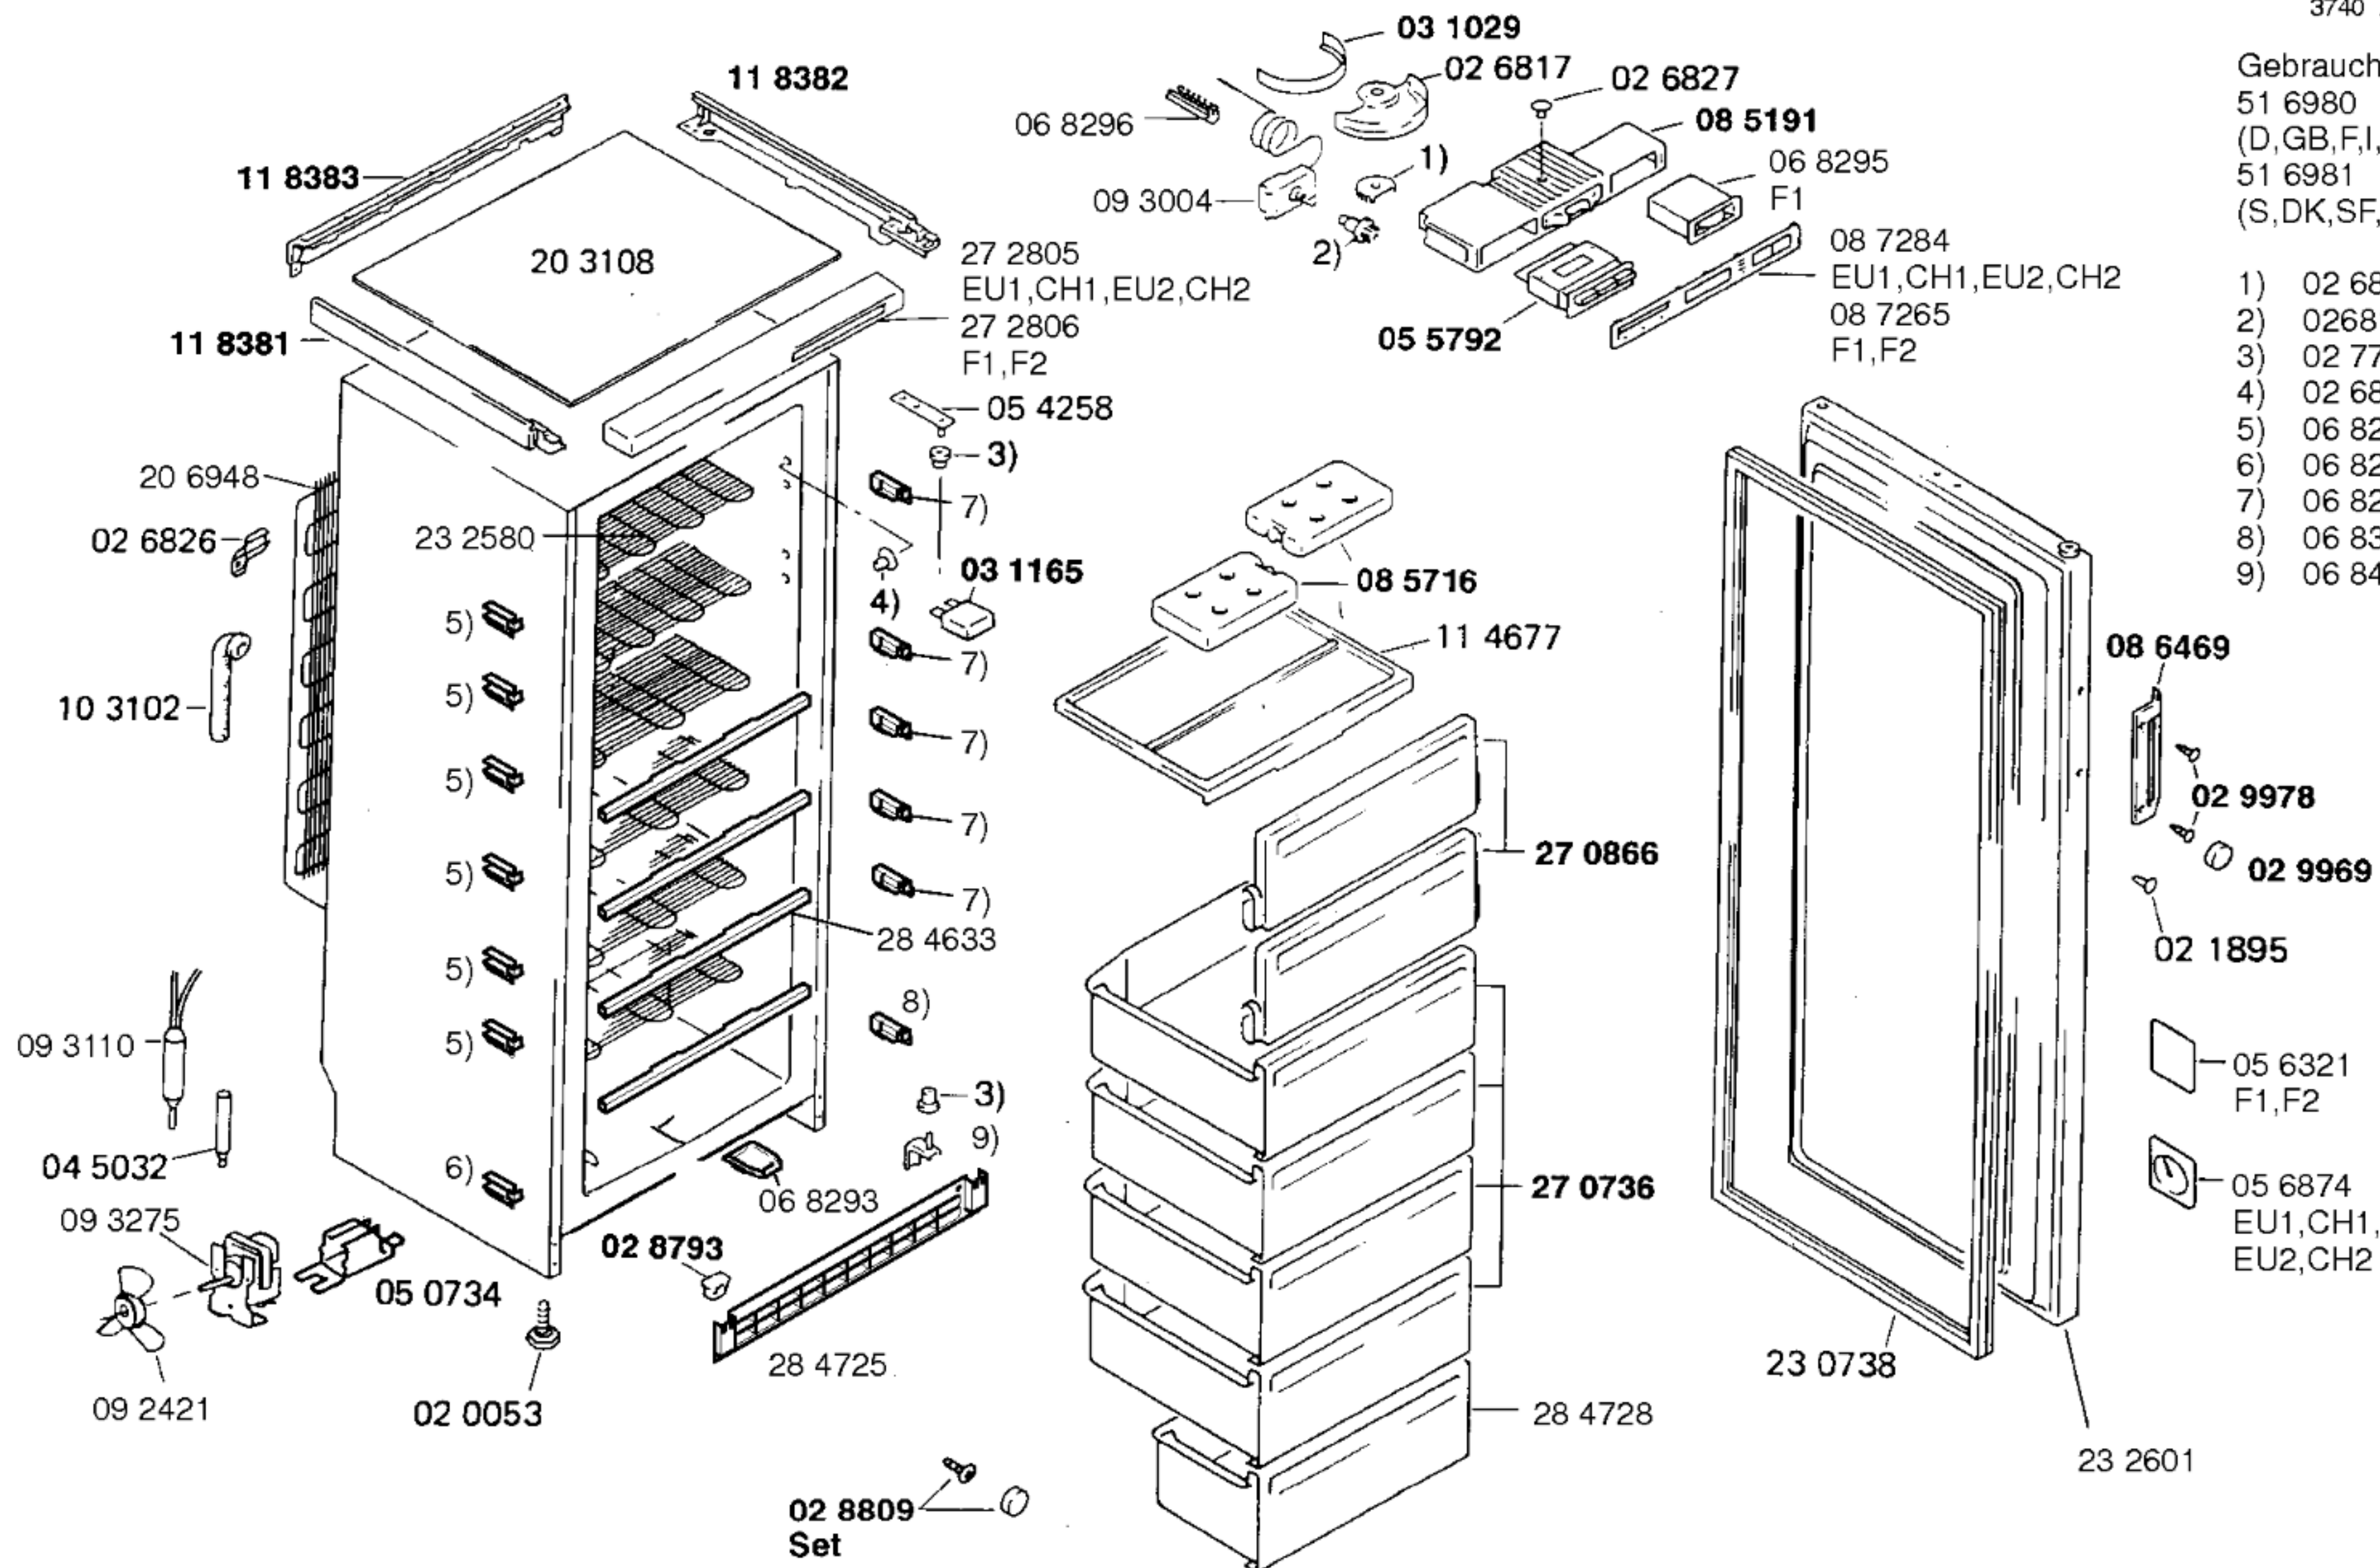


**BOSCH**

GSD 3014/01-EU1
GSD 3014CH/01-CH1
GSD 3014FF/01-F1

GSD 3014/02-EU2
GSD 3014FF/02-F2

KÜHL-,GEFRIERGERÄTE
Gefrierschränke, Stand

Ident – Nummern – Konstante
3740

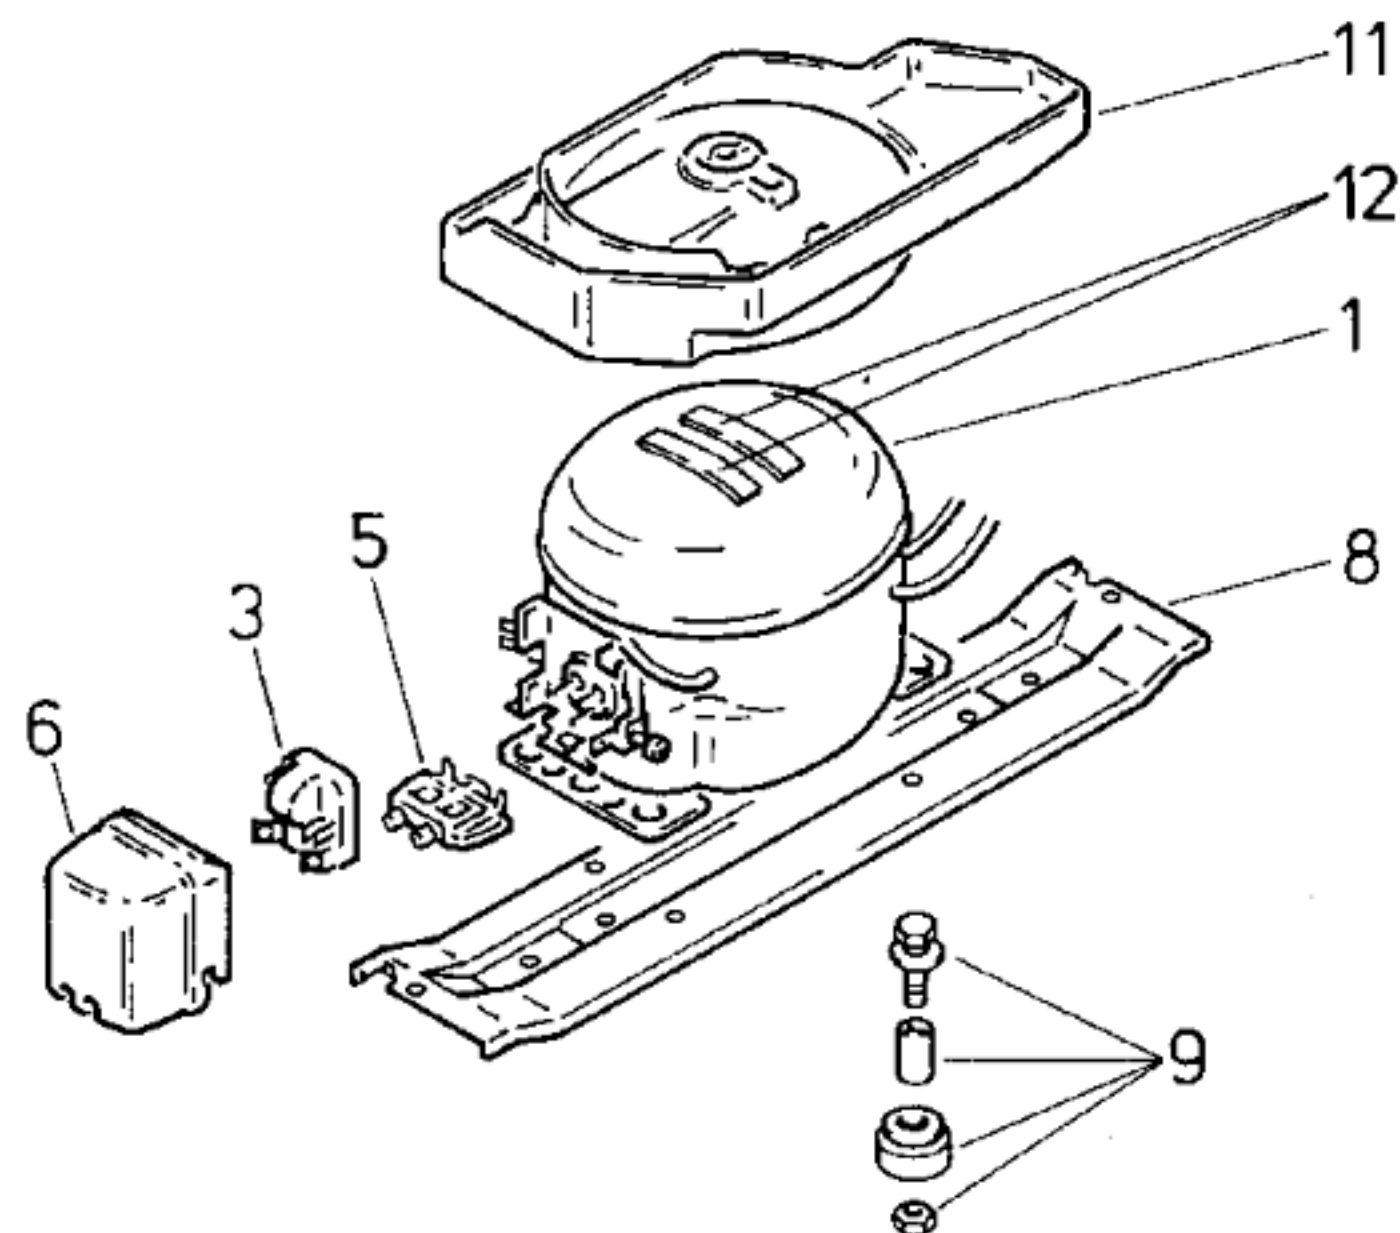

	EU1,CH1,F1	EU2,F2	
Pos.	Matsushita	Danfoss	
	D116LRAA	NL6A	
1	14 0563	14 1147	
2			
3	05 8506	06 8290	
4			
5		06 8292	
6	05 8458	06 8291	
7	02 6731		
8	11 1567	11 1567	
9	05 0166	05 0166	
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita	Danfoss	
Typ/Type		D116LRAA	NL6A	
Förderleistung/Delivery/Débit		l/h	1184	1098
Anlaufstrom/Starting current/Cour de démarrage		A	8,75	5,1
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	12,0	16,1
		Hi/aux Ω	28,7	13,6
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		077B2157		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	-22	-14
Valeurs de commutation		„aus“	-32	-22
		(„abtauen“ od.) „alarm“	-17,5	-10
Füllmenge/Fill.quantity/Charge		R12	g	195
Anschlußwert/Conn.load/Puiss. connectée		W	170	140
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		