



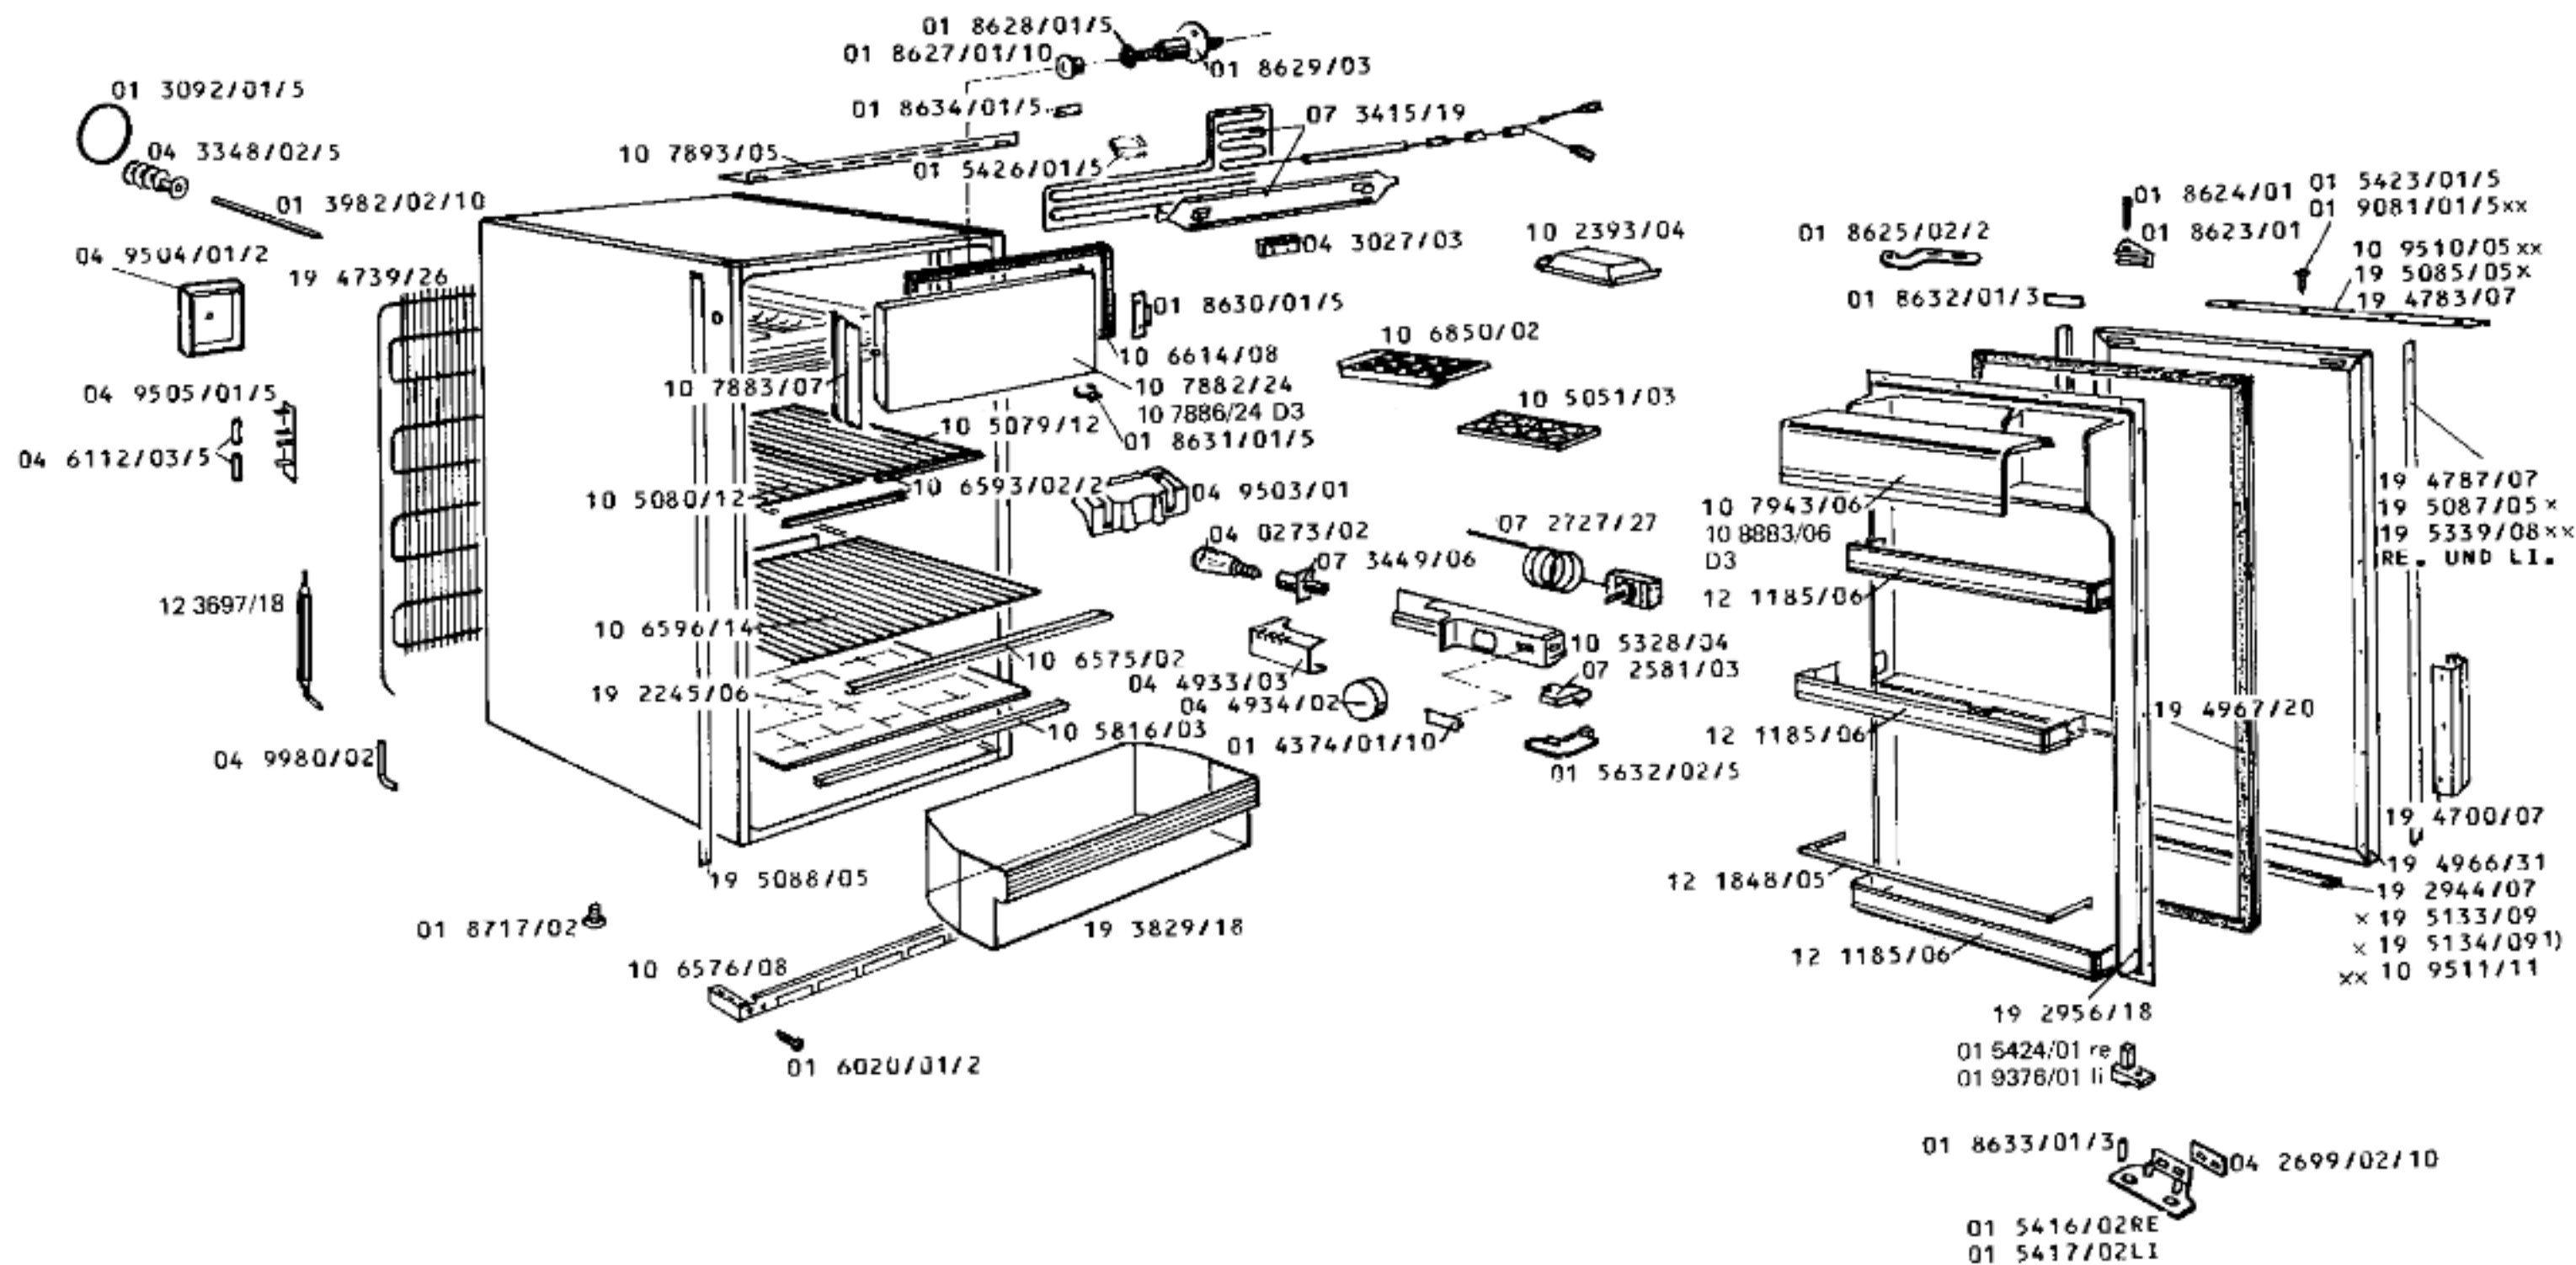

x ab FD 623 (Softline)
xx hellbranze

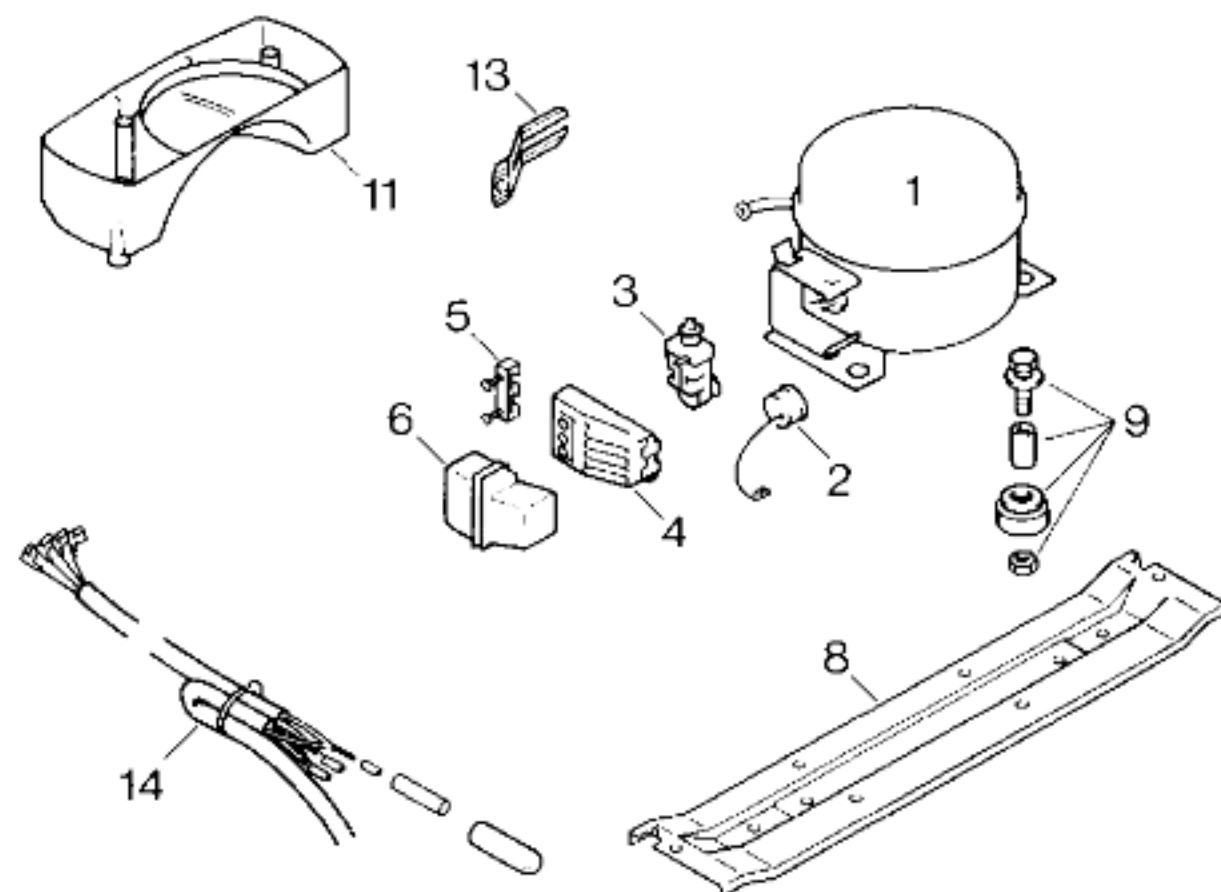

	D1 - D3	D1 - D3	
Pos.	CH1, CH2, F1, F2	CH1, CH2, F1, F2	
	Bosch	Danfoss	
1		13 1064/45	
2	07 2115/18		
3	07 1804/18	02 0108/27	
4	04 9757/02		
5		02 1361/04	
6	04 9758/02	05 1413/06	
7			
8		*11 1838/03	
9		*05 0166/05/4	
10			
11	10 6693/03	*11 1243/01	
12			
13		*04 1568/01/2	
14		*05 1226/08	

*1 Bei Ersatz des Bosch-Verdichters mitbestellen.
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Bosch	Danfoss		
Typ/Type	V 792	TL 4 A		
Förderleistung/Delivery/Débit	l/h	792	702	
Anlaufstrom/Starting current/Cour. de démarrage	A	8,3	7,8	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	23,0	23,8
	Hi/aux	Ω	25,2	17,0
Temp.-Regler/Thermostat	Ranco			
Typ/Type	A 59			
Reglerstellung/Position	kalt warm			
Schaltwerte/Switching values/	„ein“ °C	+ 4 + 4		
Valeurs de commutation	„aus“	- 29 - 20		
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill quantity/Charge	R12	g	125	
Anschlußwert/Conn. load/Puiss. connectée	W	115		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω	3280		
Leistung/Power/Puissance	W	14,8		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			