



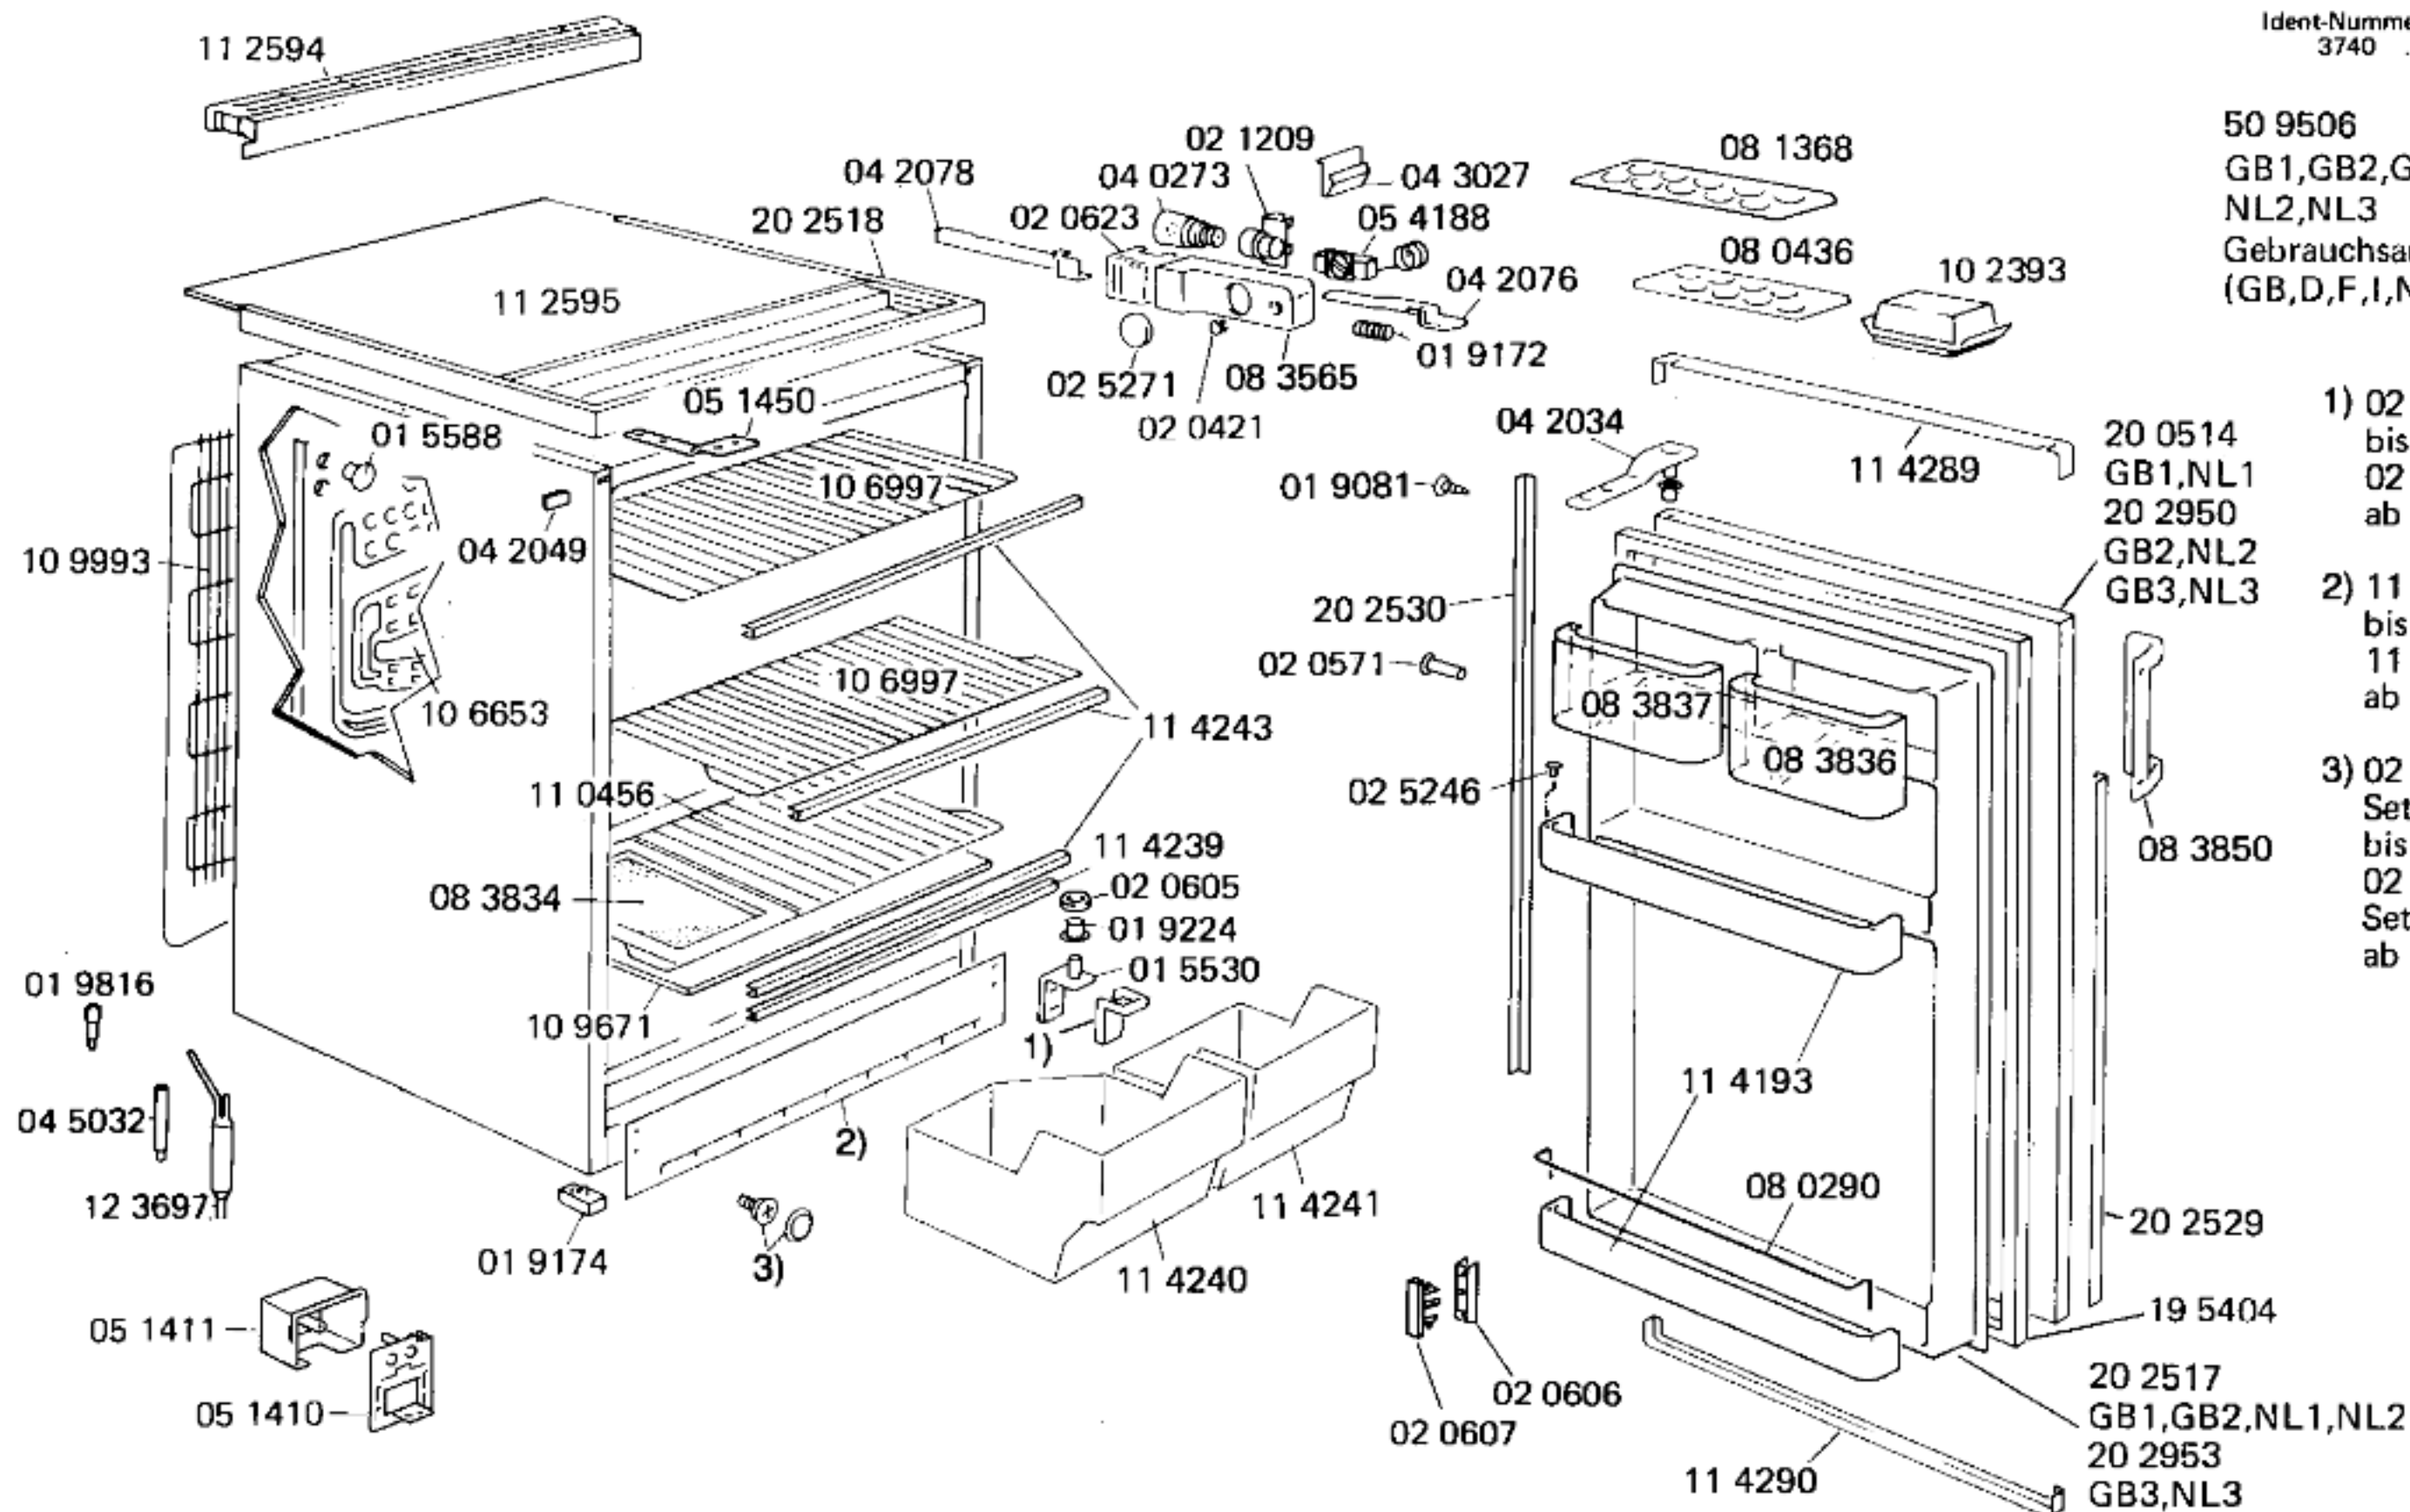

50 9506
GB1, GB2, GB3, NL1,
NL2, NL3
Gebrauchsanweisung
(GB, D, F, I, NL, SF)

- 1) 02 5792
bis FD 6608
02 8810
ab FD 6609
- 2) 11 2207
bis FD 6608
11 7432
ab FD 6609
- 3) 02 2063
Set
bis FD 8809
02 8809
Set
ab FD 6609

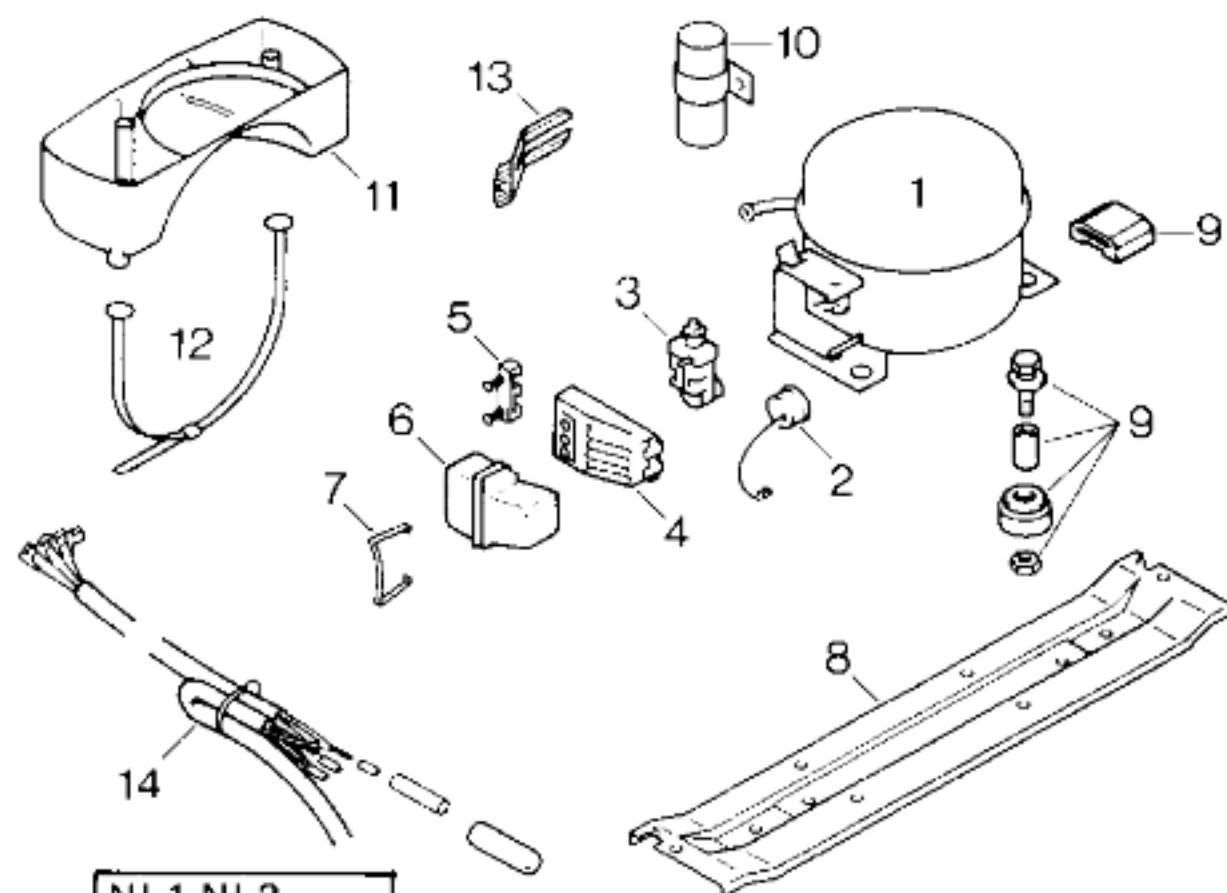

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES

Verdichter/Compressor/Compresseur		Necchi	Aspera		
Typ/Type		M 3,5 J	BP 1058 A		
Förderleistung/Delivery/Débit		l/h	567		
Anlaufstrom/Starting current/Cour. de démarrage		A	6,3	6,4	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	30,6	31,0	
		Hi/aux Ω	49,0	29,0	
Temp.-Regler/Thermostat		M + J			
Typ/Type		TF 57			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		+ 4 + 4			
Valeurs de commutation		-26,5 - 13			
		(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge		R12 g	95		
Anschlußwert/Conn.load/Puiss. connectée		W	90		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

	NL1,NL2			
Pos.	GB1,GB2	GB3,NL3		
	Necchi	Aspera		
1	14 0110	14 0393		
2	02 1627	02 8074		
3	02 1577	02 7424		
4	04 9990			
5		02 7425		
6	04 9991	05 5145		
7	04 9996			
8	11 1567	11 1567		
9	05 0166	05 0166		
10				
11	07 5162	08 4744		
12	02 1562			
13	04 1568	04 1568		
14				